TOSHIBA

FILE NO. 050-200308

SERVICE MANUAL

COLOR TELEVISION

20A43

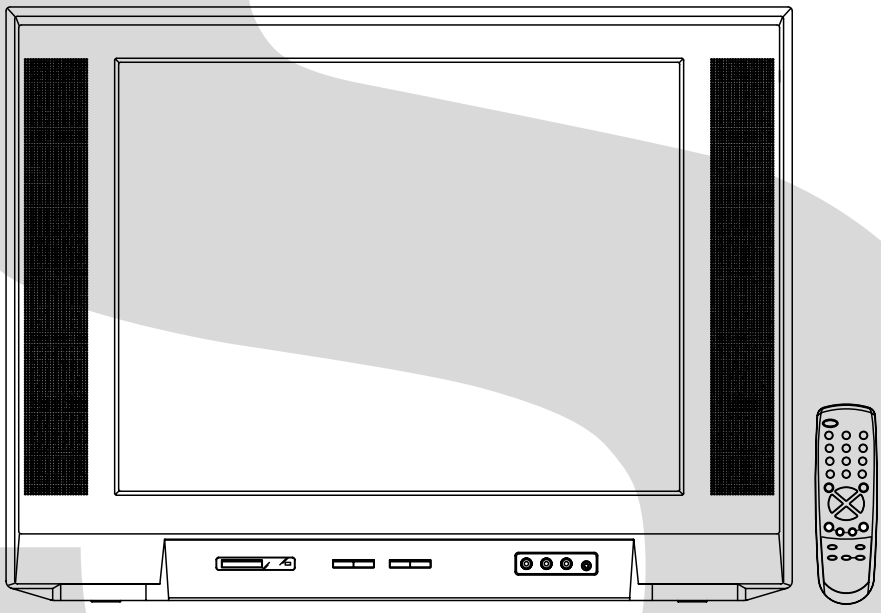

DOCUMENT CREATED IN JAPAN, Apr., 2003

SERVICING NOTICES ON CHECKING

1. KEEP THE NOTICES

As for the places which need special attentions, they are indicated with the labels or seals on the cabinet, chassis and parts. Make sure to keep the indications and notices in the operation manual.

2. AVOID AN ELECTRIC SHOCK

There is a high voltage part inside. Avoid an electric shock while the electric current is flowing.

3. USE THE DESIGNATED PARTS

The parts in this equipment have the specific characters of incombustibility and withstand voltage for safety. Therefore, the part which is replaced should be used the part which has the same character.
Especially as to the important parts for safety which is indicated in the circuit diagram or the table of parts as a ⚠ mark, the designated parts must be used.

4. PUT PARTS AND WIRES IN THE ORIGINAL POSITION AFTER ASSEMBLING OR WIRING

There are parts which use the insulation material such as a tube or tape for safety, or which are assembled in the condition that these do not contact with the printed board. The inside wiring is designed not to get closer to the pyrogenic parts and high voltage parts. Therefore, put these parts in the original positions.

5. TAKE CARE TO DEAL WITH THE CATHODE-RAY TUBE

In the condition that an explosion-proof cathode-ray tube is set in this equipment, safety is secured against implosion. However, when removing it or serving from backward, it is dangerous to give a shock. Take enough care to deal with it.

6. AVOID AN X-RAY

Safety is secured against an X-ray by considering about the cathode-ray tube and the high voltage peripheral circuit, etc.
Therefore, when repairing the high voltage peripheral circuit, use the designated parts and make sure not modify the circuit.
Repairing except indicates causes rising of high voltage, and it emits an X-ray from the cathode-ray tube.

7. PERFORM A SAFETY CHECK AFTER SERVICING

Confirm that the screws, parts and wiring which were removed in order to service are put in the original positions, or whether there are the portions which are deteriorated around the serviced places serviced or not. Check the insulation between the antenna terminal or external metal and the AC cord plug blades. And be sure the safety of that.

(INSULATION CHECK PROCEDURE)

1. Unplug the plug from the AC outlet.
2. Remove the antenna terminal on TV and turn on the TV.
3. Insulation resistance between the cord plug terminals and the eternal exposure metal **[Note 2]** should be more than 1M ohm by using the 500V insulation resistance meter **[Note 1]**.
4. If the insulation resistance is less than 1M ohm, the inspection repair should be required.

[Note 1]

If you have not the 500V insulation resistance meter, use a Tester.

[Note 2]

External exposure metal: Antenna terminal
Earphone jack

HOW TO ORDER PARTS

Please include the following informations when you order parts. (Particularly the VERSION LETTER.)

1. MODEL NUMBER and VERSION LETTER
   The MODEL NUMBER can be found on the back of each product and the VERSION LETTER can be found at the end of the SERIAL NUMBER.
2. PART NO. and DESCRIPTION
   You can find it in your SERVICE MANUAL.

IMPORTANT

Inferior silicon grease can damage IC's and transistors.
When replacing an IC's or transistors, use only specified silicon grease (YG6260M).
Remove all old silicon before applying new silicon.

TABLE OF CONTENTS

SERVICING NOTICES ON CHECKING A1-1
HOW TO ORDER PARTS A1-1
IMPORTANT A1-1
TABLE OF CONTENTS A2-1
GENERAL SPECIFICATIONS ..... A3-1~A3-5
DISASSEMBLY INSTRUCTIONS
1. REMOVAL OF ANODE CAP B1-1
2. REMOVAL AND INSTALLATION OF FLAT PACKAGE IC B2-1, B2-2
SERVICE MODE LIST C1-1
CONFIRMATION OF HOURS USED C1-1
WHEN REPLACING EEPROM (MEMORY) IC C1-1
ELECTRICAL ADJUSTMENTS ..... D-1~D-5
BLOCK DIAGRAMS E-1, E-2
PRINTED CIRCUIT BOARDS
MAIN/CRT ..... F-1~F-4
SCHEMATIC DIAGRAMS
MICON/CHROMA/TUNER G-1, G-2
DEFLECTION/CRT G-3, G-4
TV POWER G-5, G-6
SOUND G-7, G-8
COMB/FILTER G-9, G-10
AV G-11, G-12
WAVEFORMS H-1, H-2
MECHANICAL EXPLODED VIEWS I-1
MECHANICAL REPLACEMENT PARTS LIST J1-1
ELECTRICAL REPLACEMENT PARTS LIST ..... J2-1~J2-3

GENERAL SPECIFICATIONS

G-1	**TV System**	CRT	CRT Size / Visual Size	20 inch / 508.0mmV
			CRT Type	Normal
			Deflection	90 degree
			Magnetic Field BV/BH	+0.45G/0.18G
		Color System		NTSC
		Speaker		2Speaker
			Position	Front
			Size	2 x 4.7 Inch
			Impedance	8 ohm
		Sound Output	MAX	2.5+2.5 W
			10%(Typical)	2.0+2.0 W
		NTSC3.58+4.43 /PAL60Hz		No
G-2	**Tuning System**	Broadcasting System		US System M
		Tuner and Receive CH	System	1Tuner
			Destination	USA(W/ CATV)
			Tuning System	F-Synth
			Input Impedance	VHF/UHF 75 ohm
			CH Coverage	2 - 69, 4A, A-5 - A-1, A - I, J - W, W+1 - W+84
		Intermediate Frequency	Picture(FP)	45.75MHz
			Sound(FS)	41.25MHz
			FP-FS	4.50MHz
		Preset CH		No
		Stereo/Dual TV Sound		Yes
		Tuner Sound Muting		Yes
G-3	**Power**	Power Source	AC	120V AC 60Hz
			DC	
		Power Consumption	at AC	
				90 W at AC 120 V 60 Hz
			Stand by (at AC)	5 W at AC 120 V 60 Hz
			Per Year	-- kWh/Year
		Protector	Power Fuse	Yes
G-4	**Regulation**		Safety	UL/CSA
			Radiation	FCC/IC
			X-Radiation	DHHS/HWC
G-5	**Temperature**		Operation	+5oC ~ +40oC
			Storage	-20oC ~ +60oC
G-6	**Operating Humidity**			Less than 80% RH

GENERAL SPECIFICATIONS

G-7	**On Screen Display**	Menu			Yes
			Menu Type		Character
			Picture		Yes
				Contrast	Yes
				Brightness	Yes
				Color	Yes
				Tint	Yes
				Sharpness	Yes
			Audio		Yes
				Bass	Yes
				Treble	Yes
				Balance	Yes
				BBE On/Off	No
				Stable Sound On/Off	Yes
				Surround On/Off	Yes
			CH Set Up		Yes
				TV/CABLE(CATV)	Yes
				Auto CH Memory	Yes
				Add/ Delete	Yes
			Lock		Yes
				CH Lock	Yes
				Video Lock	Yes
				Game Timer	Yes
				Change Password	Yes
			On Timer		Yes
			Language		Yes
			V-chip		Yes
				CH Label	No
				Favorite CH	No
				Color Stream DVD/DTV	No
			Control Level		Yes
				Volume	Yes
				Brightness	Yes
				Contrast	Yes
				Color	Yes
				Tint	Yes
				Sharpness	Yes
				Tuning	No
				Bass	Yes
				Treble	Yes
				Balance	Yes
			Stereo,Audio Output,SAP		Yes
			Video		Yes
			Color Stream		No
			Channel(TV/Cable)		Yes
			CH Label		No
			Game Timer		Yes
			Sleep Timer		Yes
			Sound Mute		Yes
			V-chip Rating		Yes
			16: 9		No
G-8	**OSD Language**				English French Spanish
G-9	**Clock and Timer**	Sleep Timer		Max Time	120 Min
				Step	10 Min
		On Timer		Program(On Timer)	Yes
		Wake Up Timer			No
		Timer Back-up (at Power Off Mode)		more than	-- Min Sec

GENERAL SPECIFICATIONS

G-10	**Remote Control**	Unit		RC-EH
		Glow in Dark Remocon		Yes
		Format		Toshiba
		Custom Code		40-BF h
		Power Source	Voltage(D.C)	3V
			UM size x pcs	UM-4 x 2 pcs
		Total Keys		28 Keys
		Keys	Power	Yes
			1	Yes
			2	Yes
			3	Yes
			4	Yes
			5	Yes
			6	Yes
			7	Yes
			8	Yes
			9	Yes
			0	Yes
			100	No
			CH Up	Yes
			CH Down	Yes
			Volume Up	Yes
			Volume Down	Yes
			TV/Caption/Text	Yes
			CH1/CH2	Yes
			TV/Video(TV/AV)	Yes
			CH RTN/CH ENT(Quick View)	Yes
			Sleep	Yes
			RE Call(Call)	Yes
			Reset	Yes
			Menu	Yes
			Enter	Yes
			Mute	Yes
			Exit	No
			MTS(Audio Select)	Yes
			Set +	Yes
			Set -	Yes
			16: 9	No
		Multi Brand Keys	CH Up(VCR)	No
			CH Down(VCR)	No
			Pause/Still	No
			TV/VCR(VCR)	No
			Code	No
			FF	No
			Rew	No
			Rec	No
			Play	No
			Stop	No
			TV	No
			VCR	No
			Cable	No

GENERAL SPECIFICATIONS

G-11	**Features**	Auto Degauss		Yes
		Auto Shut Off		Yes
		Canal+		No
		CATV		Yes
		Anti-theft		No
		Rental		No
		Memory(Last CH)		Yes
		Memory(Last Volume)		Yes
		V-Chip		Yes
			Type	USA,ORION Type
		BBE		No
		Auto Search		No
		CH Allocation		No
		SAP		Yes
		Just Clock Function		No
		CH Label		No
		VM Circuit		No
		Full OSD		No
		Premiere		No
		Comb Filter		Yes 2 Lines
		Auto CH Memory		Yes
		Hotel Lock		No
		Closed Caption		Yes
		Stable Sound		Yes
		FBT Leak Test Protect		Yes
		CH Lock		Yes
		Video Lock		Yes
		Game Timer		Yes
		Energy Star		No
		Favorite CH		No
		Surround		Yes
		16:9 Mode		No
G-12	**Accessories**	Owner's Manual	Language	English /French
			W/ Warranty	Yes
		Remote Control Unit		Yes
		Rod Antenna		No
			Poles	
			Terminal	
		Loop Antenna		No
			Terminal	
		U/V Mixer		No
		DC Car Cord (Center+)		No
		Guarantee Card		No
		Warning Sheet		No
		Circuit Diagram		No
		Antenna Change Plug		No
		Service Facility List		No
		Important Safety Instruction		No
		Dew/AHC Caution Sheet		No
		AC Plug Adapter		No
		Quick Set-up Sheet		No
		Battery		Yes
			UM size x pcs	UM4 x 2
			OEM Brand	No
		AC Cord		No
		AV Cord (2Pin-1Pin)		No
		Registration Card (NDL Card)		Yes
		ESP Card		Yes
		PTB Sheet		No
		300 ohm to 75 ohm Antenna Adapter		No

GENERAL SPECIFICATIONS

G-13	**Interface**	Switch	Front	Power	Yes
				System Select	No
				Main Power SW	No
				Sub Power	No
				Channel Up/Reset	Yes
				Channel Down/Enter	Yes
				Volume Up/Set Up	Yes
				Volume Down/Set Down	Yes
				MENU=Volume Up+Volume Down	Yes
			Rear	AC/DC	No
				TV/CATV Selector	No
				Degauss	No
				Main Power SW	No
		Indicator		Power	Yes(RED)
				Stand-by	No
				On Timer	No
		Terminals	Front	Video Input	RCA
				Audio Input	RCA x 2
				Other Terminal	Head phone
			Rear	Video Input(Rear1)	RCA
				Video Input(Rear2)	No
				Audio Input(Rear1)	RCA x 2
				Audio Input(Rear2)	No
				Video Output	No
				Audio Output	No
				Euro Scart	No
				Color Stream	No
				Diversity	No
				Ext Speaker	No
				DC Jack 12V(Center +)	No
				VHF/UHF Antenna Input	F Type
				AC Outlet	No
G-14	**Set Size**			Approx. W x D x H (mm)	590 x 492 x 446.5
G-15	**Weight**			Net (Approx.)	21.0kg (46.3 lbs)
				Gross (Approx.)	23.8kg (52.5 lbs)
G-16	**Carton**		Master Carton		No
				Content	---- Sets
				Material	-- /--
				Dimensions W x D x H(mm)	-- x -- x --
				Description of Origin	No
			Gift Box		Yes
				Material	Double/Brown
				Dimensions W x D x H(mm)	658 x 575 x 529
				Design	As per Buyer's
				Description of Origin	Yes
			Drop Test		Natural Dropping At 1 Corner / 3 Edges / 6 Surfaces
				Height (cm)	46
			Container Stuffing		288 Sets/40' container
G-17	**Cabinet Material**		Cabinet	Cabinet Front	PS 94V0 DECABROM
				Cabinet Rear	PS 94V0 DECABROM
			PCB	Non-Halogen Demand	No
				Eyelet Demand	Yes

DISASSEMBLY INSTRUCTIONS

1. REMOVAL OF ANODE CAP

Read the following **NOTED** items before starting work.

* After turning the power off there might still be a potential voltage that is very dangerous. When removing the Anode Cap, make sure to discharge the Anode Cap's potential voltage.
* Do not use pliers to loosen or tighten the Anode Cap terminal, this may cause the spring to be damaged.

REMOVAL

1. Follow the steps as follows to discharge the Anode Cap. **(Refer to Fig. 1-1.)**
   Connect one end of an Alligator Clip to the metal part of a flat-blade screwdriver and the other end to ground.
   While holding the plastic part of the insulated Screwdriver, touch the support of the Anode with the tip of the Screwdriver.
   A cracking noise will be heard as the voltage is discharged.

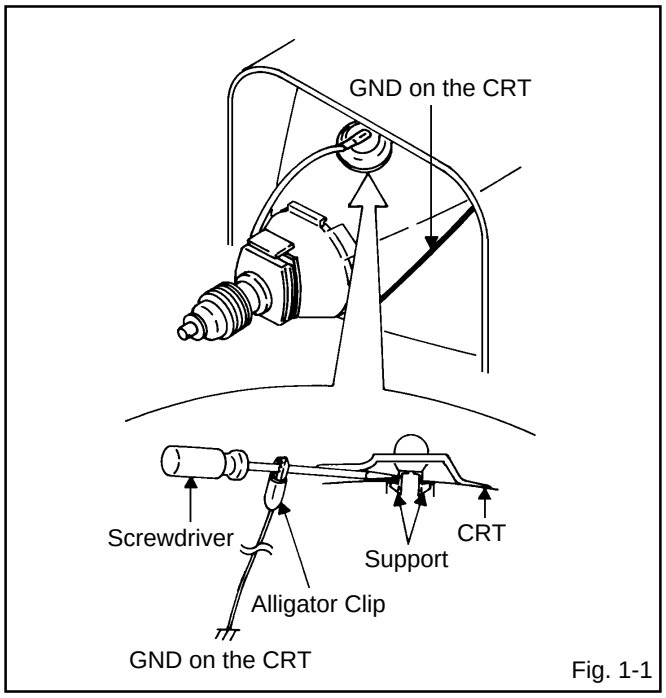

Fig. 1-1

2. Flip up the sides of the Rubber Cap in the direction of the arrow and remove one side of the support. **(Refer to Fig. 1-2.)**

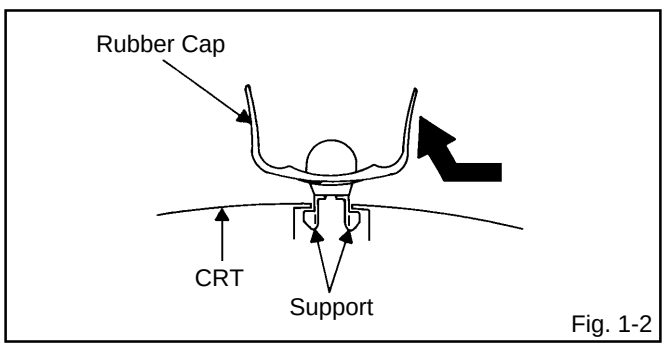

Fig. 1-2

3. After one side is removed, pull in the opposite direction to remove the other.

NOTE

Take care not to damage the Rubber Cap.

INSTALLATION

1. Clean the spot where the cap was located with a small amount of alcohol. **(Refer to Fig. 1-3.)**

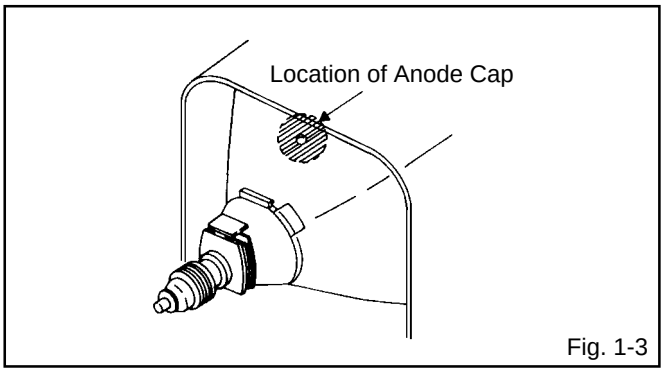

Fig. 1-3

NOTE

Confirm that there is no dirt, dust, etc. at the spot where the cap was located.

2. Arrange the wire of the Anode Cap and make sure the wire is not twisted.
3. Turn over the Rubber Cap. **(Refer to Fig. 1-4.)**

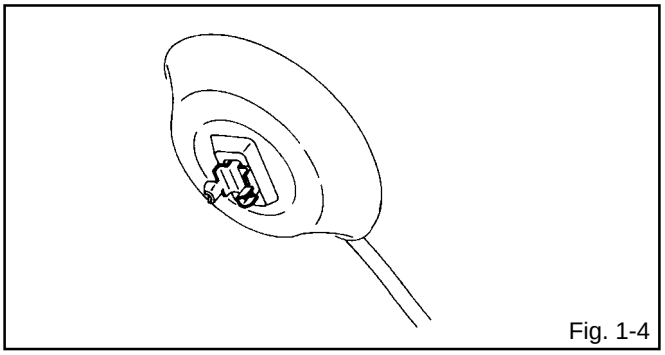
Fig. 1-4

4. Insert one end of the Anode Support into the anode button, then the other as shown in **Fig. 1-5**.

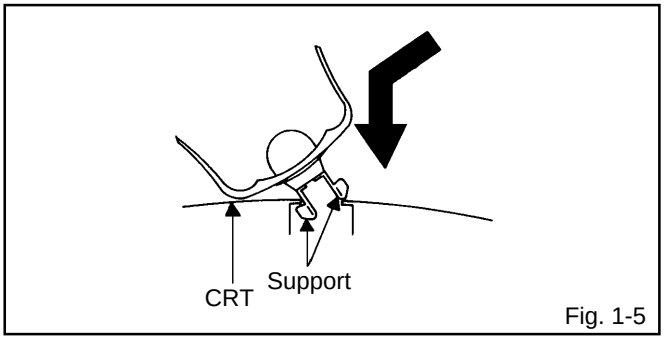

Fig. 1-5

5. Confirm that the Support is securely connected.
6. Put on the Rubber Cap without moving any parts.

DISASSEMBLY INSTRUCTIONS

2. REMOVAL AND INSTALLATION OF FLAT PACKAGE IC

REMOVAL

1. Put the Masking Tape (cotton tape) around the Flat Package IC to protect other parts from any damage. **(Refer to Fig. 2-1.)**

   NOTE

   Masking is carried out on all the parts located within 10 mm distance from IC leads.

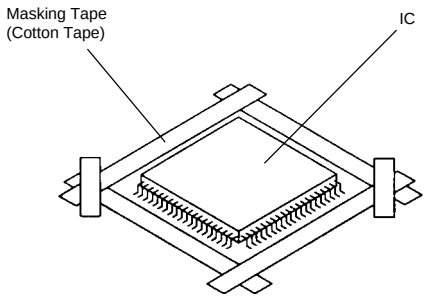

Fig. 2-1

2. Heat the IC leads using a blower type IC desoldering machine. **(Refer to Fig. 2-2.)**

   NOTE

   Do not add the rotating and the back and forth directions force on the IC, until IC can move back and forth easily after desoldering the IC leads completely.

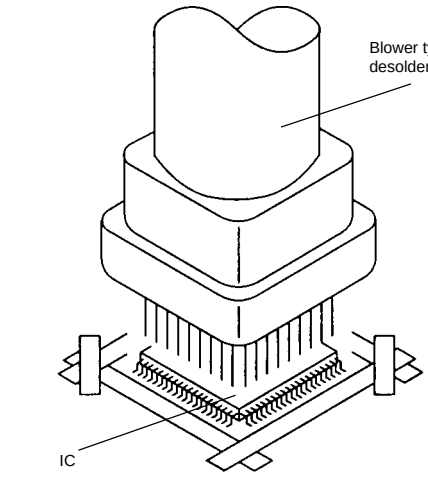

Fig. 2-2

3. When IC starts moving back and forth easily after desoldering completely, pickup the corner of the IC using a tweezers and remove the IC by moving with the IC desoldering machine. **(Refer to Fig. 2-3.)**

   NOTE

   Some ICs on the PCB are affixed with glue, so be careful not to break or damage the foil of each IC leads or solder lands under the IC when removing it.

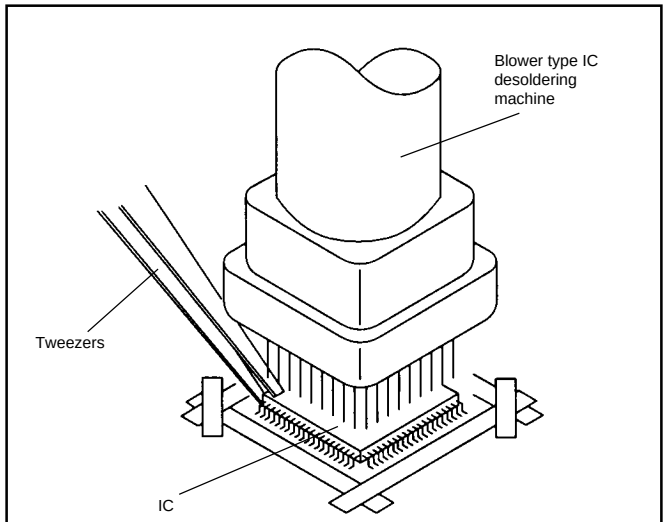

Fig. 2-3

4. Peel off the Masking Tape.

5. Absorb the solder left on the pattern using the Braided Shield Wire. **(Refer to Fig. 2-4.)**

   NOTE

   Do not move the Braided Shield Wire in the vertical direction towards the IC pattern.

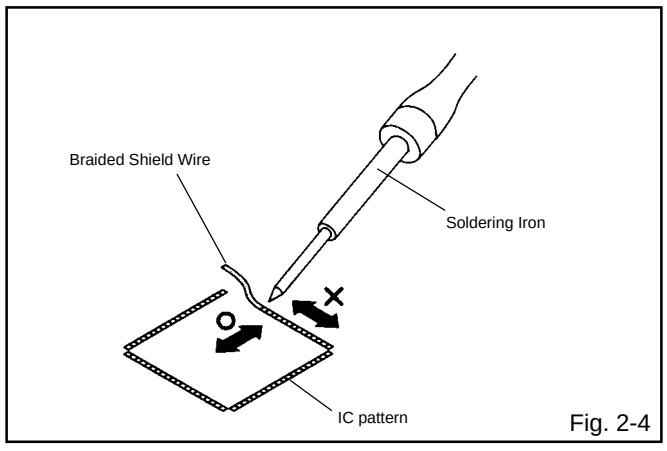

Fig. 2-4

DISASSEMBLY INSTRUCTIONS

INSTALLATION

1. Take care of the polarity of new IC and then install the new IC fitting on the printed circuit pattern. Then solder each lead on the diagonal positions of IC temporarily. **(Refer to Fig. 2-5.)**

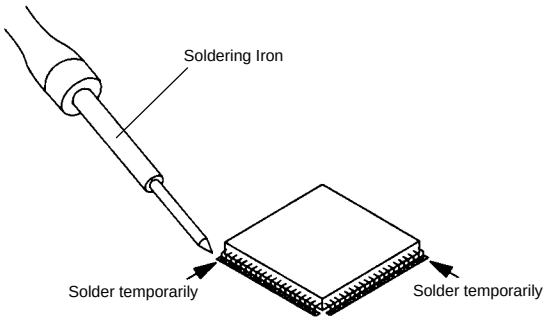

Fig. 2-5

2. Supply the solder from the upper position of IC leads sliding to the lower position of the IC leads. **(Refer to Fig. 2-6.)**

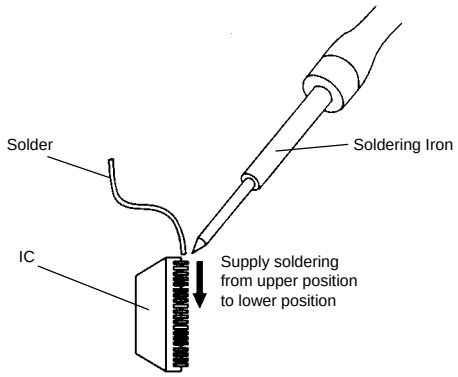

Fig. 2-6

3. Absorb the solder left on the lead using the Braided Shield Wire. **(Refer to Fig. 2-7.)**

   NOTE

   Do not absorb the solder to excess.

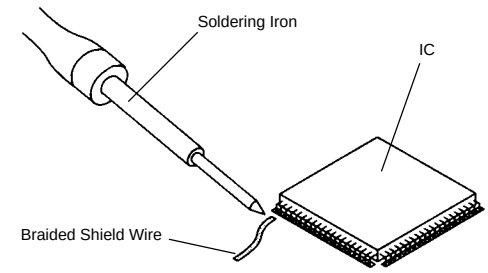

Fig. 2-7

4. When bridge-soldering between terminals and/or the soldering amount are not enough, resolder using a Thin-tip Soldering Iron. **(Refer to Fig. 2-8.)**

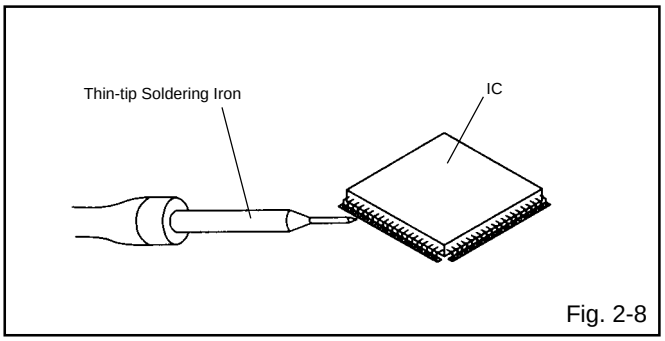

Fig. 2-8

5. Finally, confirm the soldering status on four sides of the IC using a magnifying glass.
   Confirm that no abnormality is found on the soldering position and installation position of the parts around the IC. If some abnormality is found, correct by resoldering.

   NOTE

   When the IC leads are bent during soldering and/or repairing, do not repair the bending of leads. If the bending of leads are repaired, the pattern may be damaged. So, be always sure to replace the IC in this case.

SERVICE MODE LIST

This unit provided with the following SERVICE MODES so you can repair, examine and adjust easily.
To enter the Service Mode, press both set key and remote control key for more than 1 second.

Set Key	Remocon Key	Operations
VOL. (-) MIN	0	Releasing of V-CHIP PASSWORD and LOCK PASSWORD.
VOL. (-) MIN	1	Initialization of the factory. NOTE: Do not use this for the normal servicing. If you set a factory initialization, the memories are reset such as the channel setting, and the POWER ON total hours.
VOL. (-) MIN	6	POWER ON total hours is displayed on the screen. Refer to the "CONFIRMATION OF HOURS USED". Can be checked of the INITIAL DATA of MEMORY IC. Refer to the "WHEN REPLACING EEPROM (MEMORY) IC".
VOL. (-) MIN	8	Writing of EEPROM initial data. NOTE: Do not use this for the normal servicing.
VOL. (-) MIN	9	Display of the Adjustment MENU on the screen. Refer to the "ELECTRICAL ADJUSTMENT" (On-Screen Display Adjustment).

CONFIRMATION OF HOURS USED

POWER ON total hours can be checked on the screen. Total hours are displayed in 16 system of notation.

NOTE: If you set a factory initialization, the total hours is reset to "0".

1. Set the VOLUME to minimum.
2. Press both VOL. DOWN button on the set and Channel button **(6)** on the remote control for more than 1 second.
3. After the confirmation of using hours, turn off the power.

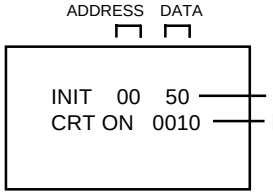

Initial setting content of MEMORY IC.
POWER ON total hours.
= (16 x 16 x 16 x thousands digit value)
+ (16 x 16 x hundreds digit value)
+ (16 x tens digit value)
+ (ones digit value)

FIG. 1

WHEN REPLACING EEPROM (MEMORY) IC

If a service repair is undertaken where it has been required to change the MEMORY IC, the following steps should be taken to ensure correct data settings while making reference to TABLE 1.

NOTE: No need setting for after INI 0F due to the adjustment value.

INI	+0	+1	+2	+3	+4	+5	+6	+7	+8	+9	+A	+B	+C	+D	+E	+F
00	50	04	4F	4C	17	B3	24	6B	3B	A8	AA	10	9C	4F	00	03

Table 1

1. Enter DATA SET mode by setting VOLUME to minimum.
2. Press both VOL. DOWN button on the set and Channel button **(6)** on the remote control for more than 1 second. ADDRESS and DATA should appear as FIG 1.
3. ADDRESS is now selected and should "blink". Using the SET +/- button on the remote, step through the ADDRESS until required ADDRESS to be changed is reached.
4. Press ENTER to select DATA. When DATA is selected, it will "blink".
5. Again, step through the DATA using SET +/- button until required DATA value has been selected.
6. Pressing ENTER will take you back to ADDRESS for further selection if necessary.
7. Repeat steps 3 to 6 until all data has been checked.
8. When satisfied correct DATA has been entered, turn POWER off (return to STANDBY MODE) to finish DATA input. **After the data input, set to the initializing of shipping.**
9. Turn POWER on.
10. Press both VOL. DOWN button on the set and Channel button **(1)** on the remote control for more than 1 second.
11. After the finishing of the initializing of shipping, the unit will turn off automatically.

The unit will now have the correct DATA for the new MEMORY IC.

ELECTRICAL ADJUSTMENTS

1. ADJUSTMENT PROCEDURE

Read and perform these adjustments when repairing the circuits or replacing electrical parts or PCB assemblies.

CAUTION

- Use an isolation transformer when performing any service on this chassis.
- Before removing the anode cap, discharge electricity because it contains high voltage.
- When removing a PCB or related component, after unfastening or changing a wire, be sure to put the wire back in its original position.
- When you exchange IC and Transistor for a heat sink, apply the silicon grease on the contact section of the heat sink. Before applying new silicon grease, remove all the old silicon grease. (Old grease may cause damages to the IC and Transistor.)

Prepare the following measurement tools for electrical adjustments.

1. Oscilloscope
2. Digital Voltmeter
3. Multi-sound Generator
4. Pattern Generator

On-Screen Display Adjustment

1. In the condition of NO indication on the screen. Press the VOL. DOWN button on the set and the Channel button **(9)** on the remote control for more than 1 second to appear the adjustment mode on the screen as shown in **Fig. 1-1**.

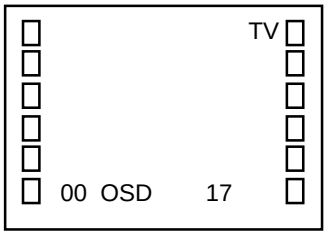

Fig. 1-1

3. Use the Channel UP/DOWN button or Channel button **(0-9)** on the remote control to select the options shown in **Fig. 1-2**.
4. Press the MENU button on the remote control to end the adjustments.

NO.	FUNCTION	NO.	FUNCTION
00	OSD H	17	CONTRAST MAX
01	CUT OFF	18	CONTRAST MIN
04	H.VCO	19	COLOR CENT
05	H.PHAS	20	COLOR MAX
06	V.SIZE	21	COLOR MIN
07	V.SHIFT	22	TINT
08	R.DRIVE	23	SHARPNESS
09	B.DRIVE	24	FM LEVEL
10	R.BIAS	25	LEVEL
11	G.BIAS	26	SEPARATION 1
12	B.BIAS	27	SEPARATION 2
13	BRIGHT CENT	28	TEST MONO
14	BRIGHT MAX	29	TEST STEREO
15	BRIGHT MIN	30	X-RAY TEST
16	CONTRAST CENT		

Fig. 1-2

2. BASIC ADJUSTMENTS

2-1: CONSTANT VOLTAGE

1. Set condition is AV MODE without signal.
2. Connect the digital voltmeter to the **TP402**.
3. Adjust the **VR502** until the digital voltmeter is 115 ± 1V.

2-2: CUT OFF

1. Adjust the unit to the following settings. R.DRIVE=10, G.DRIVE=10, R.BIAS=64, G.BIAS=64, B.BIAS=64, BRI CENT=130, CONT MAX=100.
2. Place the set with Aging Test for more than 15 minutes.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(01)** on the remote control to select "CUT OFF".
4. Adjust the **Screen Volume** until a dim raster is obtained.

2-3: WHITE BALANCE

NOTE: Adjust after performing CUT OFF adjustment.

1. Place the set with Aging Test for more than 10 minutes.
2. Receive the gray scale pattern from the Pattern Generator.
3. Using the remote control, set the brightness and contrast to normal position.
4. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(10)** on the remote control to select “R. BIAS”.
5. Press the CH. UP/DOWN button on the remote control to select the “R. BIAS”, “G. BIAS”, “B. BIAS”, “R. DRIVE” or “B. DRIVE”.
6. Adjust the VOL. UP/DOWN button on the remote control to whiten the R. BIAS, G. BIAS, B. BIAS, R. DRIVE, and B. DRIVE at each step tone sections equally.
7. Perform the above adjustments 5 and 6 until the white color is looked like a white.

2-4: FOCUS

1. Receive the monoscope pattern.
2. Turn the Focus Volume fully counterclockwise once.
3. Adjust the **Focus Volume** until picture is distinct.

2-5: HORIZONTAL PHASE

1. Receive the monoscope pattern.
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(05)** on the remote control to select “H. PHAS”.
4. Press the VOL. UP/DOWN button on the remote control until the SHIFT quantity of the OVER SCAN on right and left becomes minimum.

ELECTRICAL ADJUSTMENTS

2-6: VERTICAL SHIFT

1. Receive the monoscope pattern.
2. Using the remote control, set the brightness and contrast to normal position.
3. Check if the step No. of V. SHIFT is "02".
4. Adjust the **VR401** until the horizontal line becomes fit to the notch of the shadow mask.

2-7: VERTICAL SIZE

1. Receive the monoscope pattern.
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(06)** on the remote control to select “V. SIZE”.
4. Press the VOL. UP/DOWN button on the remote control until the SHIFT quantity of the OVER SCAN on upside and downside becomes 10 ± 2%.

2-8: VERTICAL LINEARITY

NOTE: Adjust after performing adjustments in section 2-7. After the adjustment of Vertical Linearity, reconfirm the Vertical Shift and Vertical Size adjustments.

1. Receive the monoscope pattern.
2. Using the remote control, set the brightness and contrast to normal position.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(08)** on the remote control to select “V. LIN”.
4. Adjust the **VR402** until the SHIFT quantity of the OVER SCAN on upside and downside becomes minimum.

2-9: LEVEL

1. Receive the monoscope pattern (70dB).
2. Connect the AC voltmeter to **pin 6 of CP601**.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(25)** on the remote control to select "LEVEL".
4. Press the VOL. UP/DOWN button on the remote control until the AC voltmeter is 75 ± 1mV.

2-10: OSD HORIZONTAL

1. Activate the adjustment mode display of **Fig. 1-1**.
2. Press the VOL. UP/DOWN button on the remote control until the difference of A and B becomes minimum. **(Refer to Fig. 2-1)**

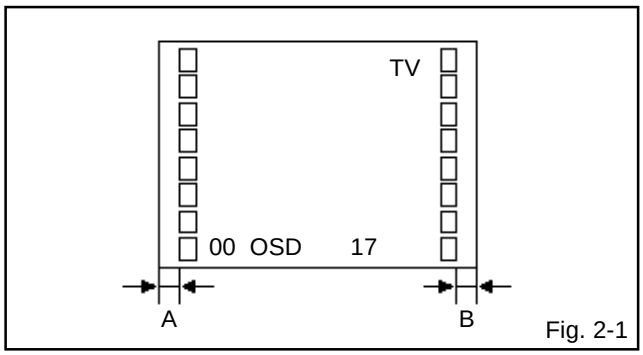

Fig. 2-1

2-11: SEPARATION 1, 2

Please do the method (1) or method (2) adjustment.

Method (1)

1. Set the multi-sound signal generator for each different L-ch and R-ch frequency (Ex. L-ch=2KHz, R-ch=400Hz) and receive the RF.
2. Connect the oscilloscope to the **Audio Out Jack**.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(26)** on the remote control to select “SEP 1”.
4. Press the VOL. UP/DOWN button on the remote control to adjust it until the audio output wave becomes a fine sine wave.
5. Press the CH UP button once the set to "SEP 2" mode. Then perform the above adjustment 4.

Method (2)

1. Set the multi-sound signal generator L-ch=1KHz, R-ch =Non input and receive the RF.
2. Connect the oscilloscope to the **Audio Out Jack (R-ch)**.
3. Press the AUDIO SELECT button on the remote control to set to the stereo mode.
4. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(26)** on the remote control to select “SEP 1”.
5. Press the VOL. UP/DOWN button on the remote control to adjust it until the R-ch output becomes minimum.
6. Set the multi-sound signal generator L-ch=Non input, R-ch=1KHz and receive the RF.
7. Connect the oscilloscope to the **Audio Out Jack (L-ch)**.
8. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(27)** on the remote control to select “SEP 2”.
9. Press the VOL. UP/DOWN button on the remote control to adjust it until the L-ch output becomes minimum.

2-12: BRIGHTNESS

1. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(13)** on the remote control to select "BRI CENT".
2. Press the VOL. UP/DOWN button on the remote control until the brightness step No. becomes “130”.
3. Receive a broadcast and check if the picture is normal.
4. Press the TV/VIDEO button on the remote control to set to the AV mode. Then perform the above adjustments 1~3.

2-13: SUB CONTRAST

1. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(17)** on the remote control to select “CONT. MAX”.
2. Press the VOL. UP/DOWN button on the remote control until the contrast step No. becomes “100”.
3. Receive a broadcast and check if the picture is normal.
4. Press the TV/VIDEO button on the remote control to set to the AV mode. Then perform the above adjustments 1~3.

ELECTRICAL ADJUSTMENTS

2-14: SUB TINT/SUB COLOR

1. Receive the color bar pattern.
2. Connect the oscilloscope to **TP024**.
3. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(22)** on the remote control to select "TINT".
4. Press the VOL. UP/DOWN button on the remote control until the section "A" becomes as straight line **(Refer to Fig. 2-2)**
5. Connect the oscilloscope to **TP022**.
6. Activate the adjustment mode display of **Fig. 1-1** and press the channel button **(19)** on the remote control to select "COL.CENT".
7. Adjust the VOLTS RANGE VARIABLE knob of the oscilloscope until the range between white 100% and 0% is set to 4 scales
8. Press the VOL. UP/DOWN button on the remote control until the red color level is adjusted to 110% of the white level. **(Refer to Fig. 2-3)**
9. Receive the color bar pattern. (Audio Video Input)
10. Press the TV/VIDEO button on the remote control to set to the AV mode. Then perform the above adjustments 2~8.

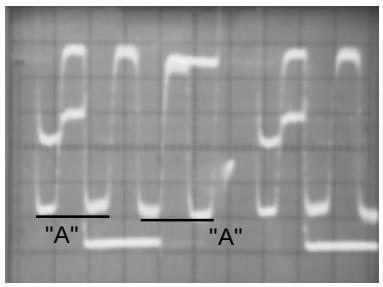

Fig. 2-2

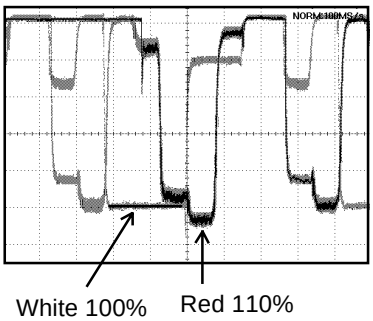

Fig. 2-3

2-18: Confirmation of Fixed Value (Step No.)

Please check if the fixed values of the each adjustment items are set correctly referring below. (RF/AV/CS)

NO.	FUNCTION	STEP NO.
04	H VCO	04
14	BRIGHT MAX	170
15	BRIGHT MIN	60
16	CONT CENT	40
18	CONT MIN	20
20	COLOR MAX	80
21	COLOR MIN	00
23	SHARPNESS	40
24	FM LEVEL	01
28	TEST MONO	00
29	TEST STERIO	00

ELECTRICAL ADJUSTMENTS

3. PURITY AND CONVERGENCE ADJUSTMENTS

NOTE

1. Turn the unit on and let it warm up for at least 30 minutes before performing the following adjustments.
2. Place the CRT surface facing east or west to reduce the terrestrial magnetism.
3. Turn ON the unit and demagnetize with a Degauss Coil.

3-1: STATIC CONVERGENCE (ROUGH ADJUSTMENT)

1. Tighten the screw for the magnet. Refer to the adjusted CRT for the position. **(Refer to Fig. 3-1)**
   If the deflection yoke and magnet are in one body, untighten the screw for the body.
2. Receive the green raster pattern from the color bar generator.
3. Slide the deflection yoke until it touches the funnel side of the CRT.
4. Adjust center of screen to green, with red and blue on the sides, using the pair of purity magnets.
5. Switch the color bar generator from the green raster pattern to the crosshatch pattern.
6. Combine red and blue of the 3 color crosshatch pattern on the center of the screen by adjusting the pair of 4 pole magnets.
7. Combine red/blue (magenta) and green by adjusting the pair of 6 pole magnets.
8. Adjust the crosshatch pattern to change to white by repeating steps 6 and 7.

3-2: PURITY

NOTE

Adjust after performing adjustments in section 3-1.

1. Receive the green raster pattern from color bar generator.
2. Adjust the pair of purity magnets to center the color on the screen.
   Adjust the pair of purity magnets so the color at the ends are equally wide.
3. Move the deflection yoke backward (to neck side) slowly, and stop it at the position when the whole screen is green.
4. Confirm red and blue color.
5. Adjust the slant of the deflection yoke while watching the screen, then tighten the fixing screw.

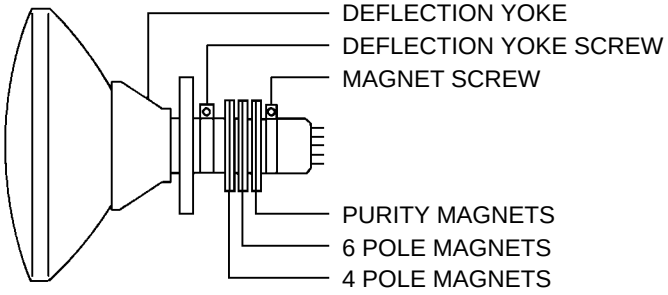

Fig. 3-1

3-3: STATIC CONVERGENCE

NOTE

Adjust after performing adjustments in section 3-2.

1. Receive the crosshatch pattern from the color bar generator.
2. Combine red and blue of the 3 color crosshatch pattern on the center of the screen by adjusting the pair of 4 pole magnets.
3. Combine red/blue (magenta) and green by adjusting the pair of 6 pole magnets.

3-4: DYNAMIC CONVERGENCE

NOTE

Adjust after performing adjustments in section 3-3.

1. Adjust the differences around the screen by moving the deflection yoke upward/downward and right/left. **(Refer to Fig. 3-2-a)**
2. Insert three wedges between the deflection yoke and CRT funnel to fix the deflection yoke. **(Refer to Fig. 3-2-b)**

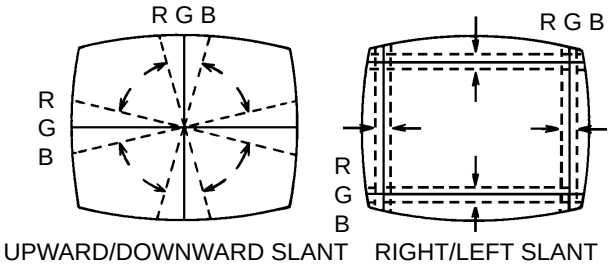

Fig. 3-2-a

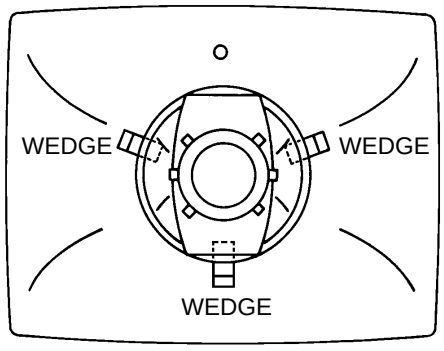

WEDGE POSITION

Fig. 3-2-b

ELECTRICAL ADJUSTMENTS

4. ELECTRICAL ADJUSTMENT PARTS LOCATION GUIDE (WIRING CONNECTION)

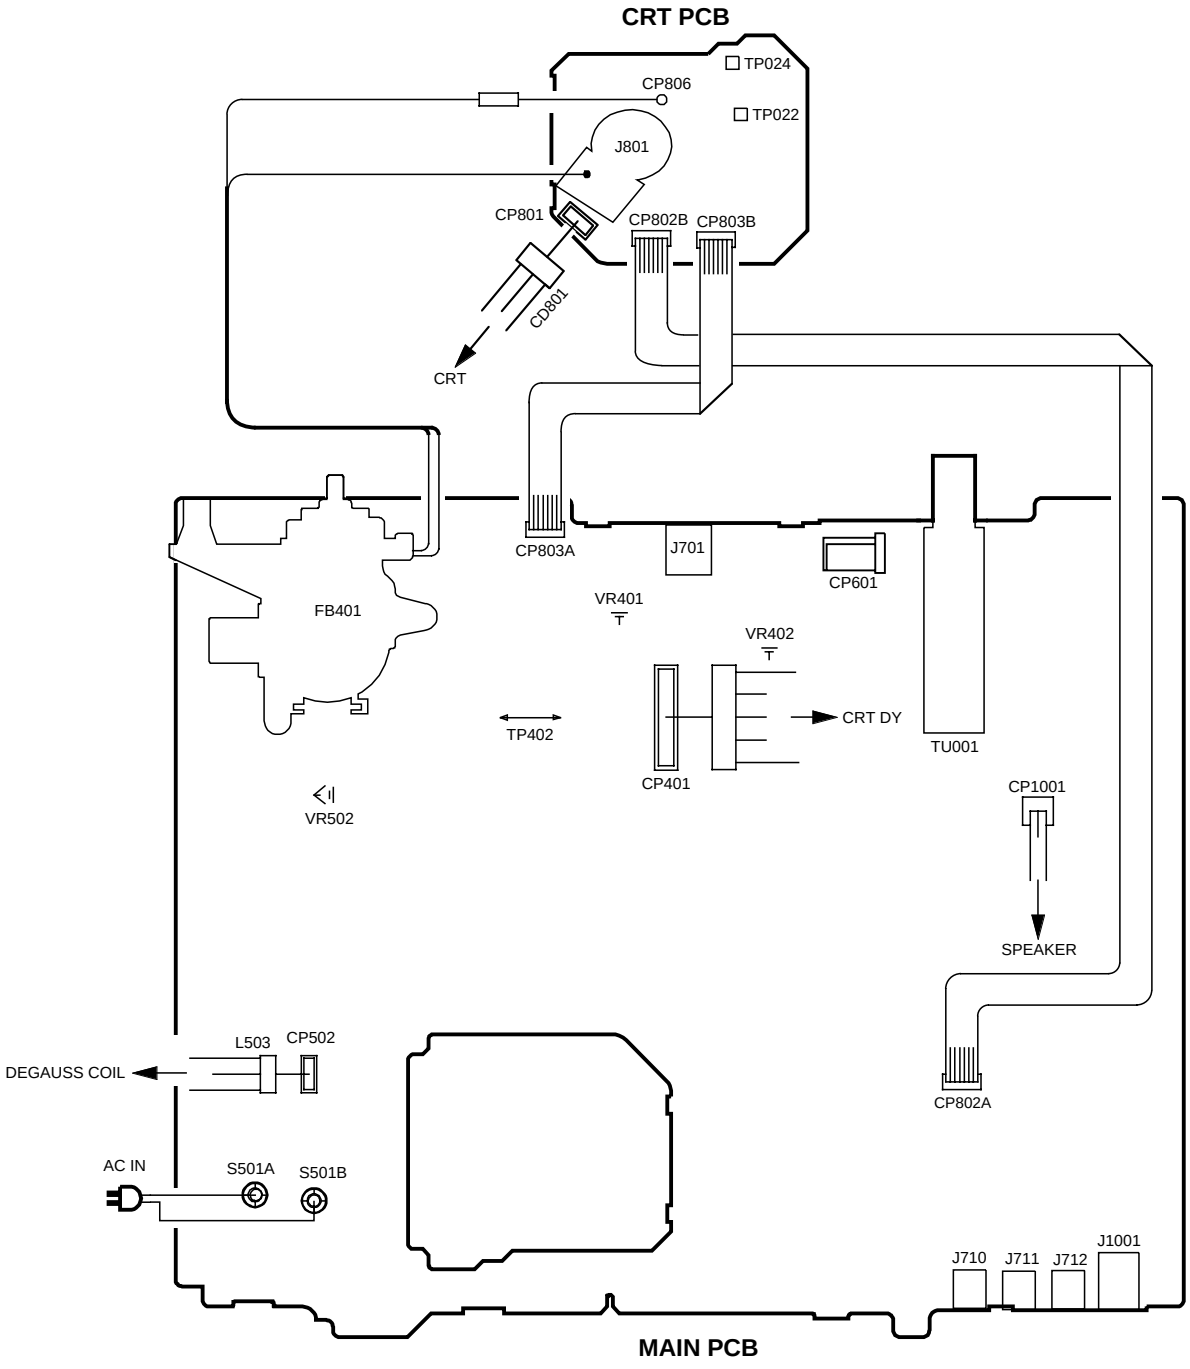

BLOCK DIAGRAM

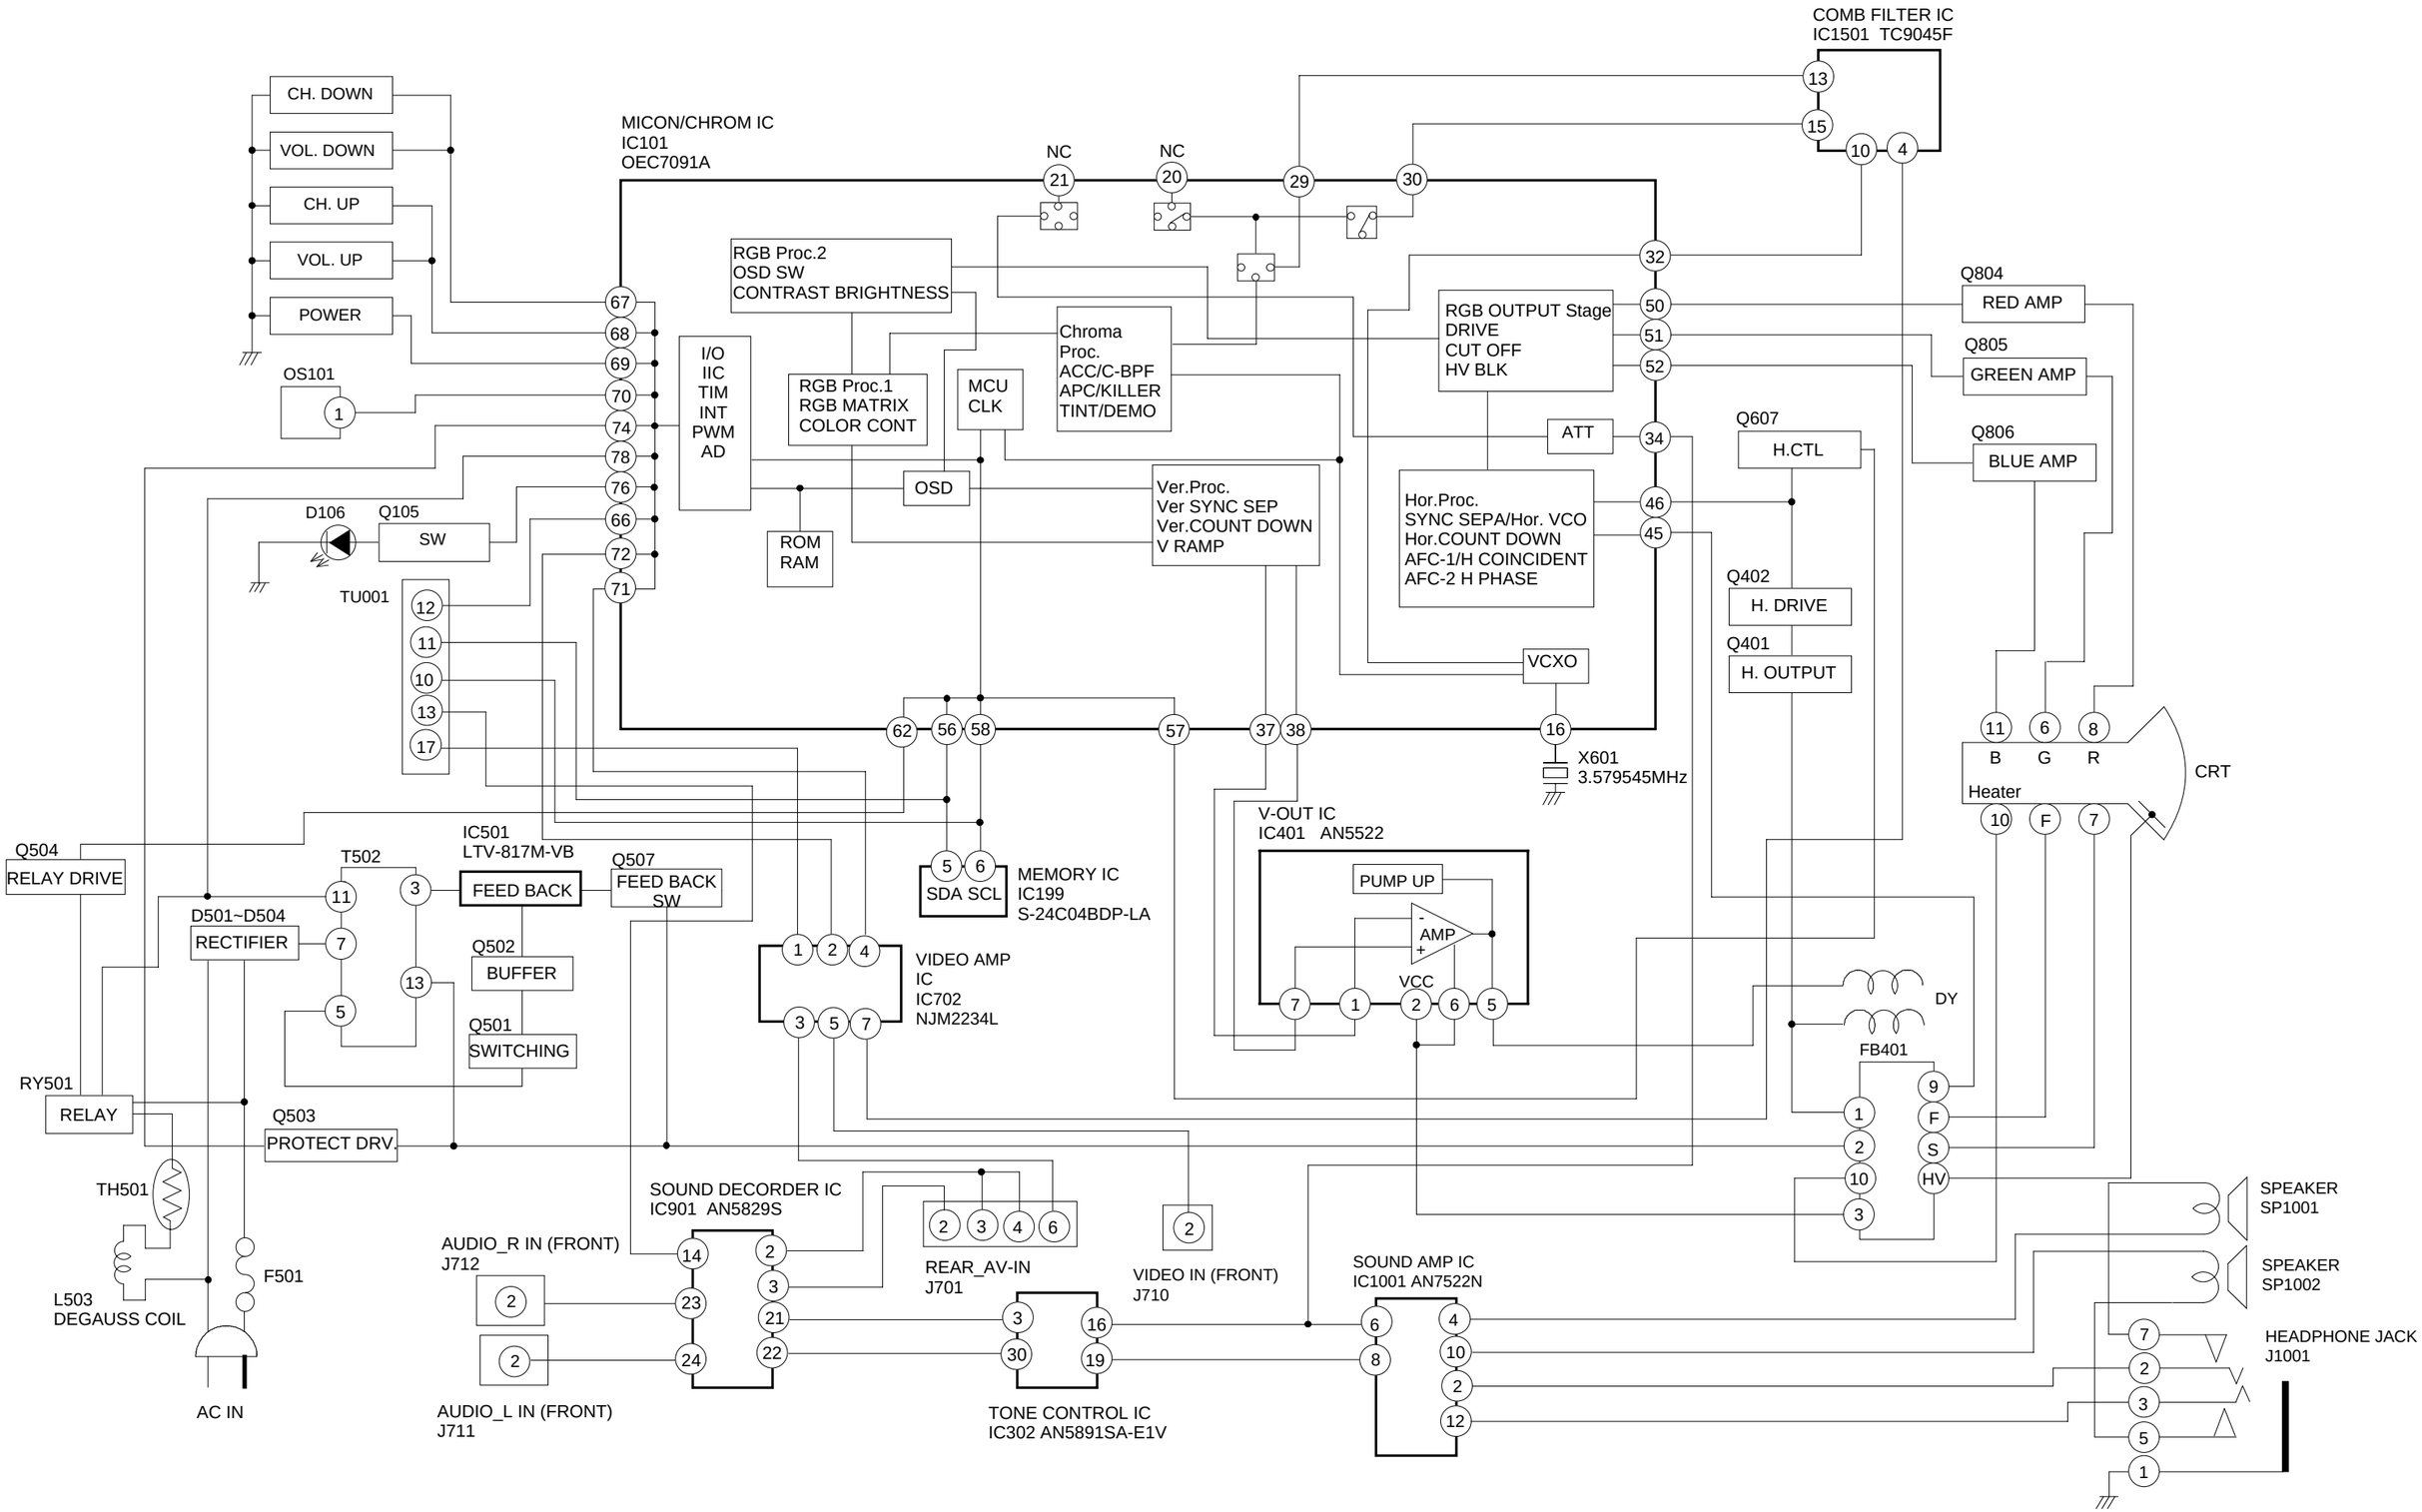

PRINTED CIRCUIT BOARDS
MAIN/CRT (INSERTED PARTS)
SOLDER SIDE

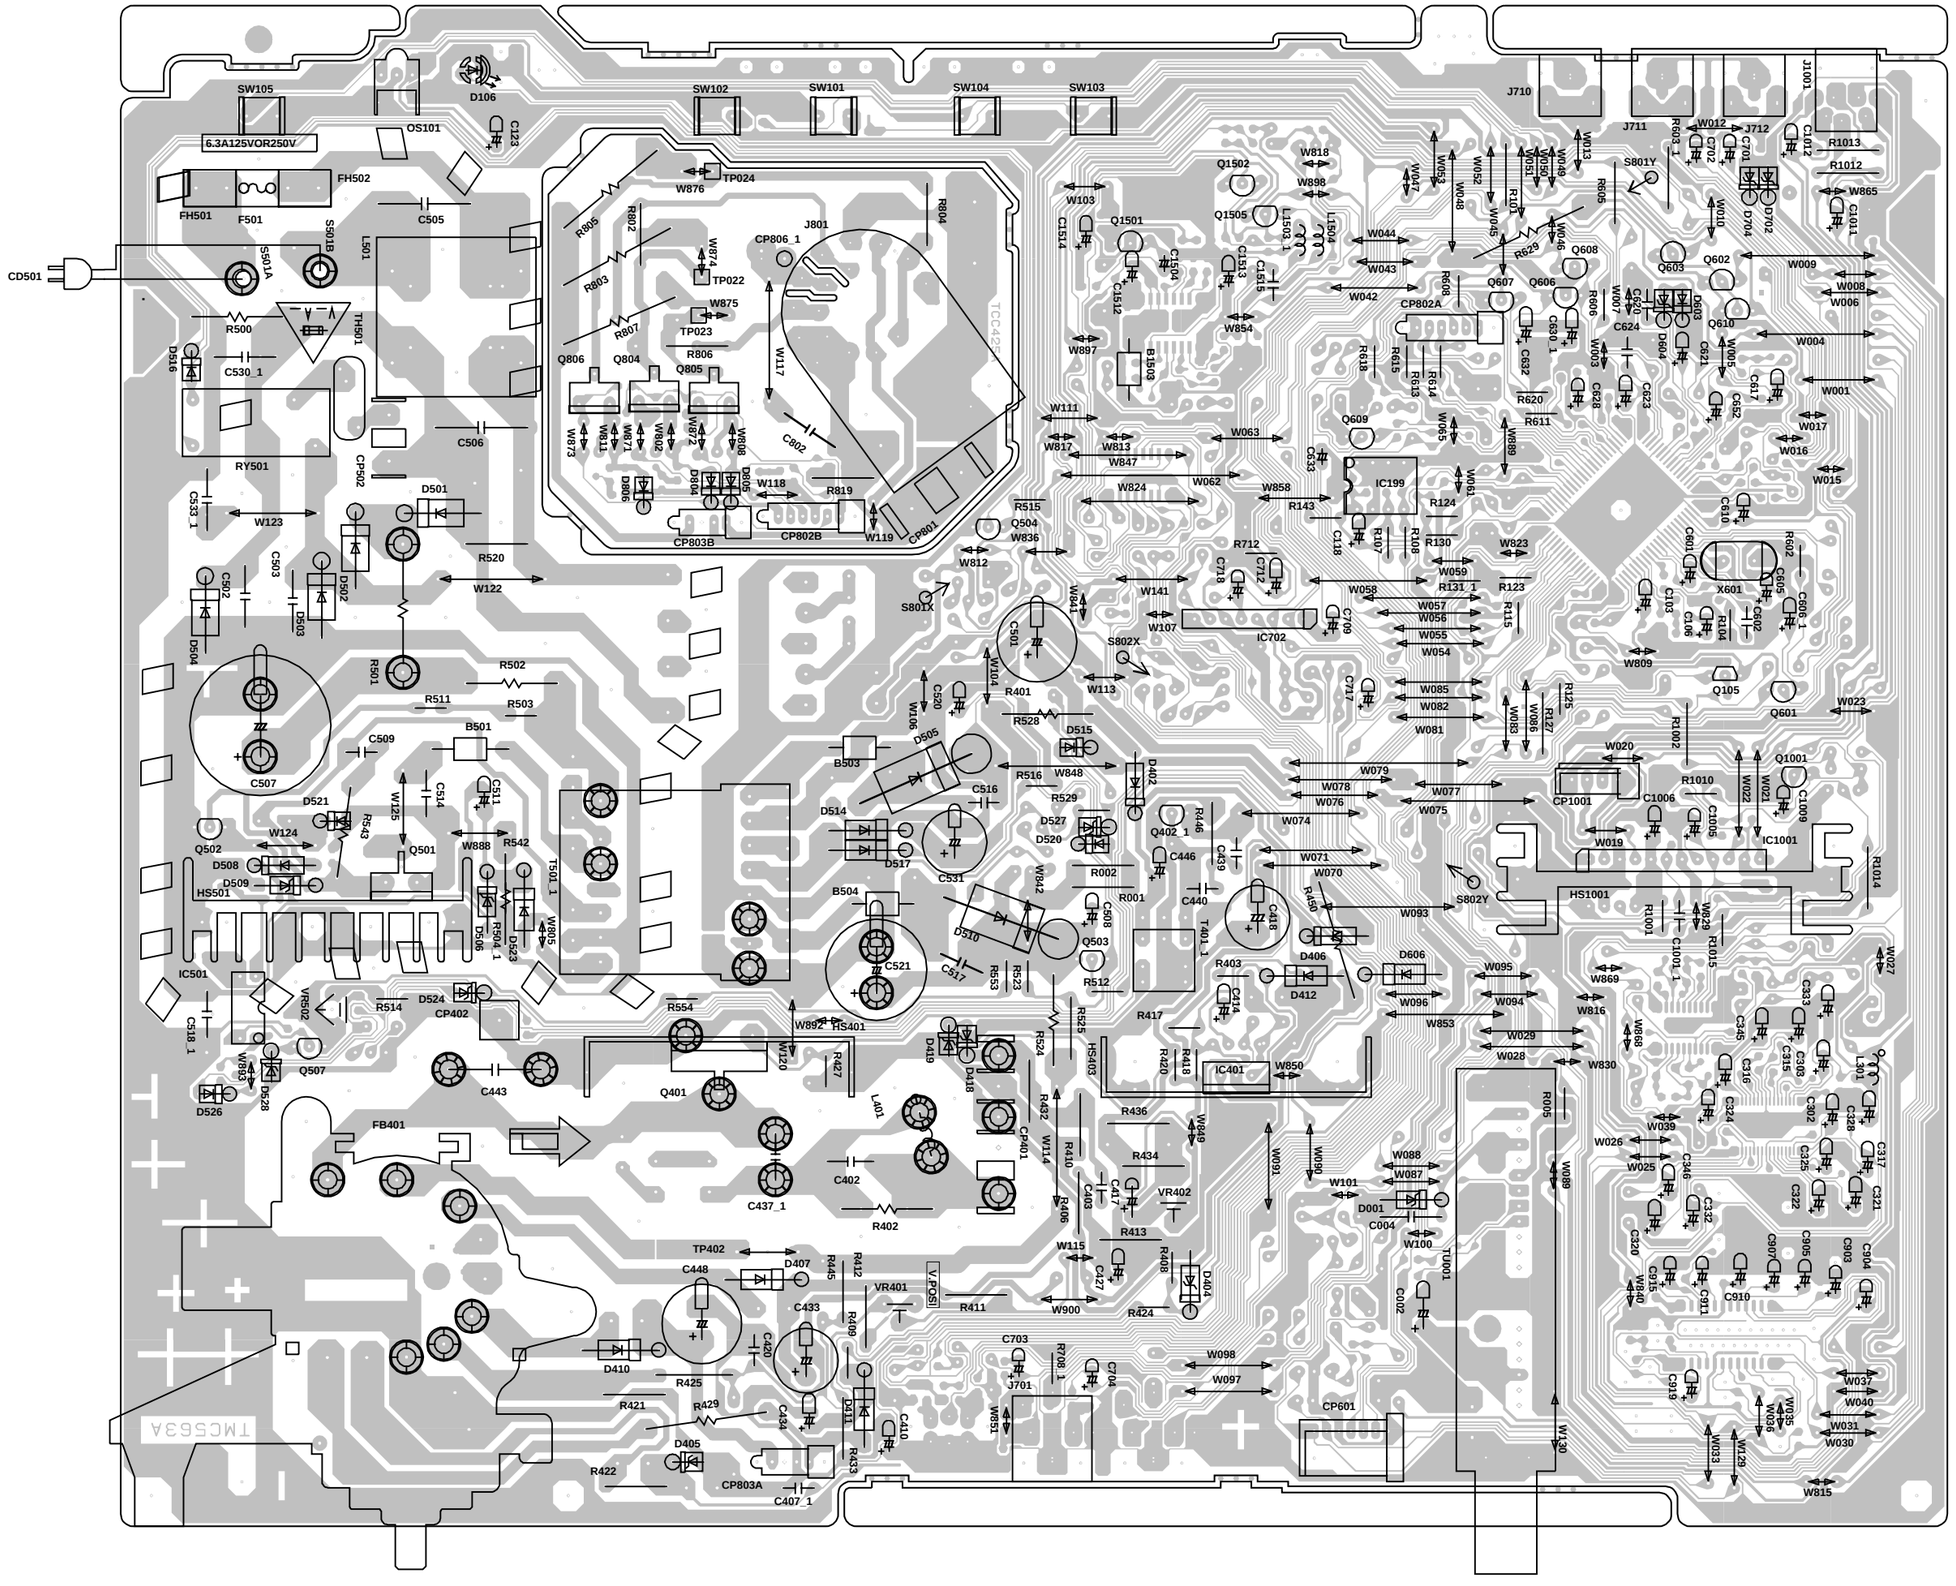
SW105
SW102
SW101
SW104
SW103
J710
J711
J712
J1001
6.3A125VOR250V
OS101
D106
C123
FH502
FH501
F501
C505
CD501
S501B
S501A
L501
TH501
R500
C530_1
D516
RY501
C506
CP502
D501
R520
W122
W123
C533_1
C502
C503
D502
D503
D504
R501
R502
R503
R511
C507
B501
C509
C554
C511
W125
D521
R543
W124
Q502
D508
D509
HS501
Q501
W888
R542
T501_1
R504_1
D506
D523
W905
IC501
C518_1
VR502
R514
D524
CP402
C443
Q507
W883
D526
D528
FB401
R554
W892
HS401
Q401
W120
R427
L401
C402
C437_1
R402
D439
D418
CP401
W114
R410
R406
C403
C417
R436
R434
W849
W890
W091
R515
Q504
W836
W812
S801X
W841
C501
W104
R401
R528
W113
S802X
C520
W106
B503
D505
R516
W848
D515
D402
C516
D514
D517
C531
R529
D527
D520
R002
R001
W842
C506
Q503
R512
B504
C521
D510
C517
R553
R523
T401_1
R403
D406
D606
D412
C414
R417
R420
R418
IC401
W850
W869
W816
W868
W830
W095
W094
W096
W853
W029
W028
R005
W089
W039
W026
W025
W088
W087
W101
D001
C004
W100
TU001
C002
W090
W098
W097
CP601
W130
W037
W040
W035
W036
W031
W030
W033
W129
W815
W027
R1014
R1001
C1001_1
W028
R1015
HS1001
S802Y
W093
W074
W071
W070
R450
C418
C446
C440
C439
R446
Q402_1
W842
W078
W076
W079
W077
W075
CP1001
C1006
R1010
W020
W019
W022
W021
C1009
Q1001
IC1001
R1002
R1013
R1012
W865
C1011
C1012
W012
W013
W050
W049
W052
W051
W053
W047
W048
S801Y
R605
R1011
W010
D704
D702
C701
C702
W044
W043
W042
CP802A
R608
Q607
Q606
Q608
R629
W046
W045
W009
W008
W006
W004
W001
W017
W016
W015
W005
W003
W007
C624
D604
D603
Q603
Q602
Q610
C630_1
C632
C628
C623
C621
C617
C652
R620
R611
C633
Q609
W063
W062
W858
R143
IC199
R124
R107
R106
R130
W059
R131_1
R123
R115
W058
W057
W056
W055
W054
C709
IC702
C718
C712
R712
W823
W809
C610
C601
C605
C602
C606_1
R602
C103
C106
R104
X601
Q105
Q601
W023
W111
W817
W813
W847
W824
W858
W963
W965
W889
W961
W823
W141
W107
W812
W841
W104
W113
W106
W848
W842
W898
W818
Q1502
Q1505
L1503_1
L1504
C1514
C1513
C1515
C1512
W103
Q1501
W897
B1503
W854
C1504
W044
W043
W042
R629
W046
W045
W009
W008
W006
W004
W001
W017
W016
W015
W005
W003
W007
C624
D604
D603
Q603
Q602
Q610
C630_1
C632
C628
C623
C621
C617
C652
R620
R611
C633
Q609
W063
W062
W858
R143
IC199
R124
R107
R106
R130
W059
R131_1
R123
R115
W058
W057
W056
W055
W054
C709
IC702
C718
C712
R712
W823
W809
C610
C601
C605
C602
C606_1
R602
C103
C106
R104
X601
Q105
Q601
W023
W111
W817
W813
W847
W824
W858
W963
W965
W889
W961
W823
W141
W107
W812
W841
W104
W113
W106
W848
W842
W898
W818
Q1502
Q1505
L1503_1
L1504
C1514
C1513
C1515
C1512
W103
Q1501
W897
B1503
W854
C1504
W044
W043
W042
CP802A
R608
Q607
Q606
Q608

PRINTED CIRCUIT BOARDS
MAIN/CRT (CHIP MOUNTED PARTS)
SOLDER SIDE

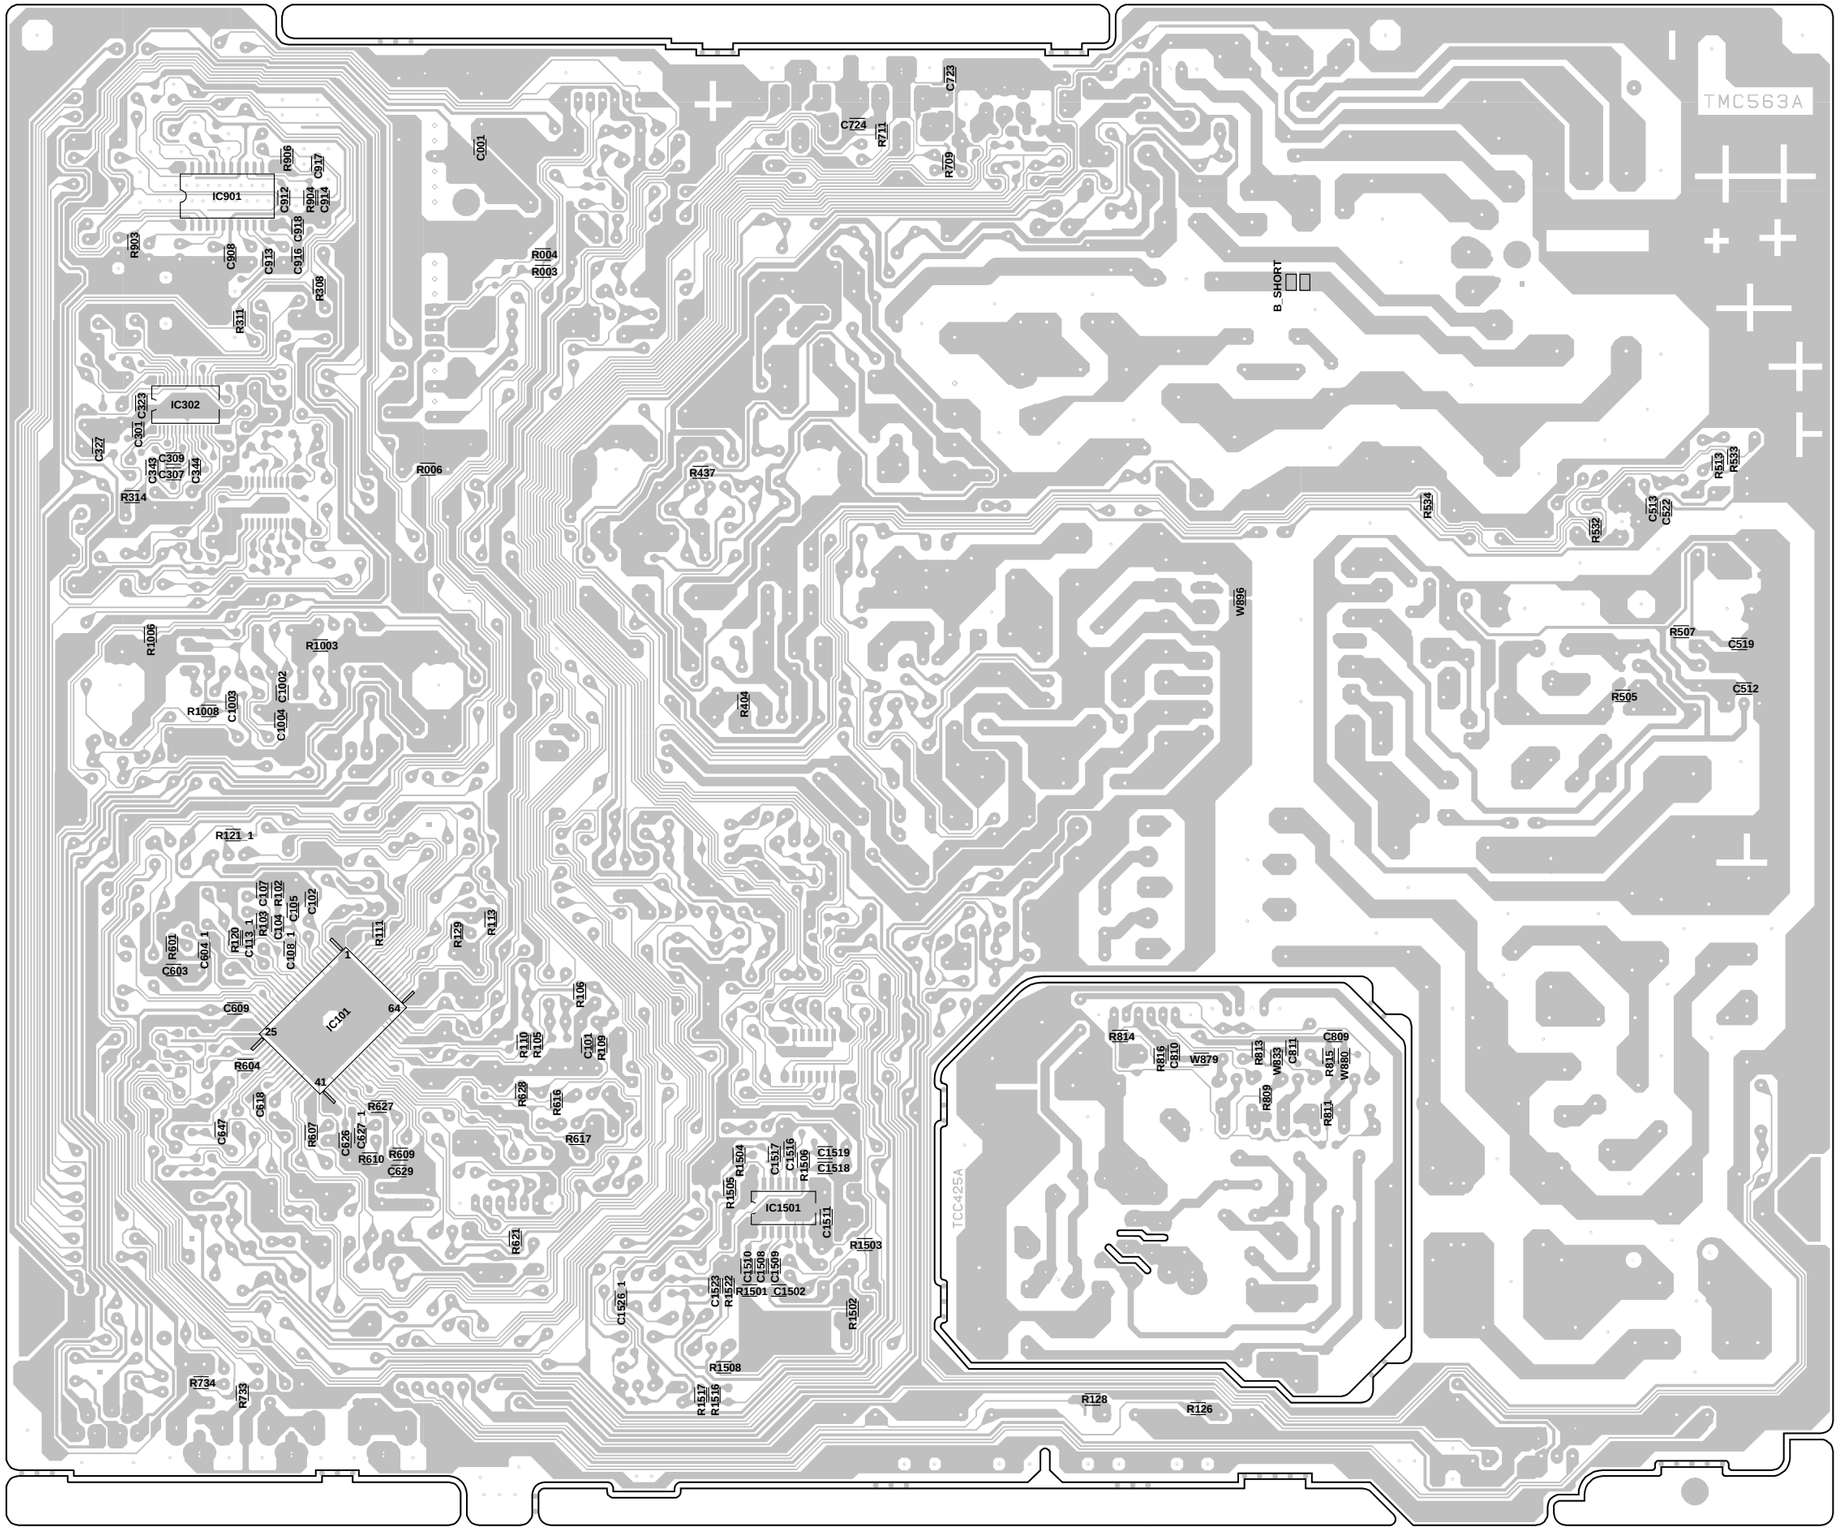

MICON/CHROMA/TUNER SCHEMATIC DIAGRAM
(MAIN PCB)

1	CNVSS	41	NC
2	XIN	42	HVCO F/B
3	XOUT	43	AFC FILTER
4	TEST1	44	DEF GND
5	VSS	45	FBP IN
6	MCU VCC	46	H OUT
7	TEST0	47	DEF VCC
8	FILT	48	NC
9	HLT	49	HI VCC
10	VHOLD	50	R OUT
11	CVIN	51	G OUT
12	RESET IN	52	B OUT
13	MCU RESET OUT	53	ACL
14	Y SW OUT	54	NC
15	V/C GND	55	PROTECT
16	3.58 XTAL	56	SDA
17	C-APC	57	H_CTL
18	MCU5.7V REG OUT	58	SCL
19	NC	59	NC
20	CVBS IN3	60	NC
21	AUDIO IN3	61	NC
22	V/C VCC	62	DEGAUSS_H
23	MCU TEST	63	STANDBY_H
24	CVBS IN2	64	VOLUME
25	AUDIO IN2	65	NC
26	CVBS IN1	66	AFT
27	AUDIO IN1	67	KEY1
28	5.7V REG OUT	68	KEY2
29	C(Y/C) IN	69	POWER_ON
30	Y(Y/C) IN	70	REMOCON
31	VREG VCC	71	AV2
32	FSC OUT	72	AV1
33	MONITOR OUT	73	AUDIO_MUTE
34	AUDIO ATT OUT	74	X-RAY
35	AUDIO ATT FILTER	75	IIC_OFF
36	TEST3	76	ON_TIMER
37	V RAMP F/B	77	BBE
38	V RAMP OUT	78	POWER FAIL
39	V RAMP CAP	79	X-RAY_TEST
40	8.7V REG OUT	80	EXT_MUTE

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE 。

NOTE:THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

CAUTION:SINCE THESE PARTS MARKED BY ⚠ ARE CRITICAL FOR SAFETY,USE ONES DESCRIBED IN PARTS LIST ONLY 。

ATTENTION:LES PIECES REPAREES PAR UN ⚠ ETANT DANGEREUSES AN POINT DE VUE SECURITE N'UTILISER QUE CELLS DECRITES DANS LA NOMENCLATURE DES PIECES。

CAUTION: DIGITAL TRANSISTOR

LUMINANCE SIGNAL
DEFLECTION SIGNAL
AUDIO SIGNAL
TUNER VIDEO SIGNAL
R.SIGNAL
G.SIGNAL
B.SIGNAL

DEFLECTION/CRT SCHEMATIC DIAGRAM

(MAIN PCB)

(CRT PCB)

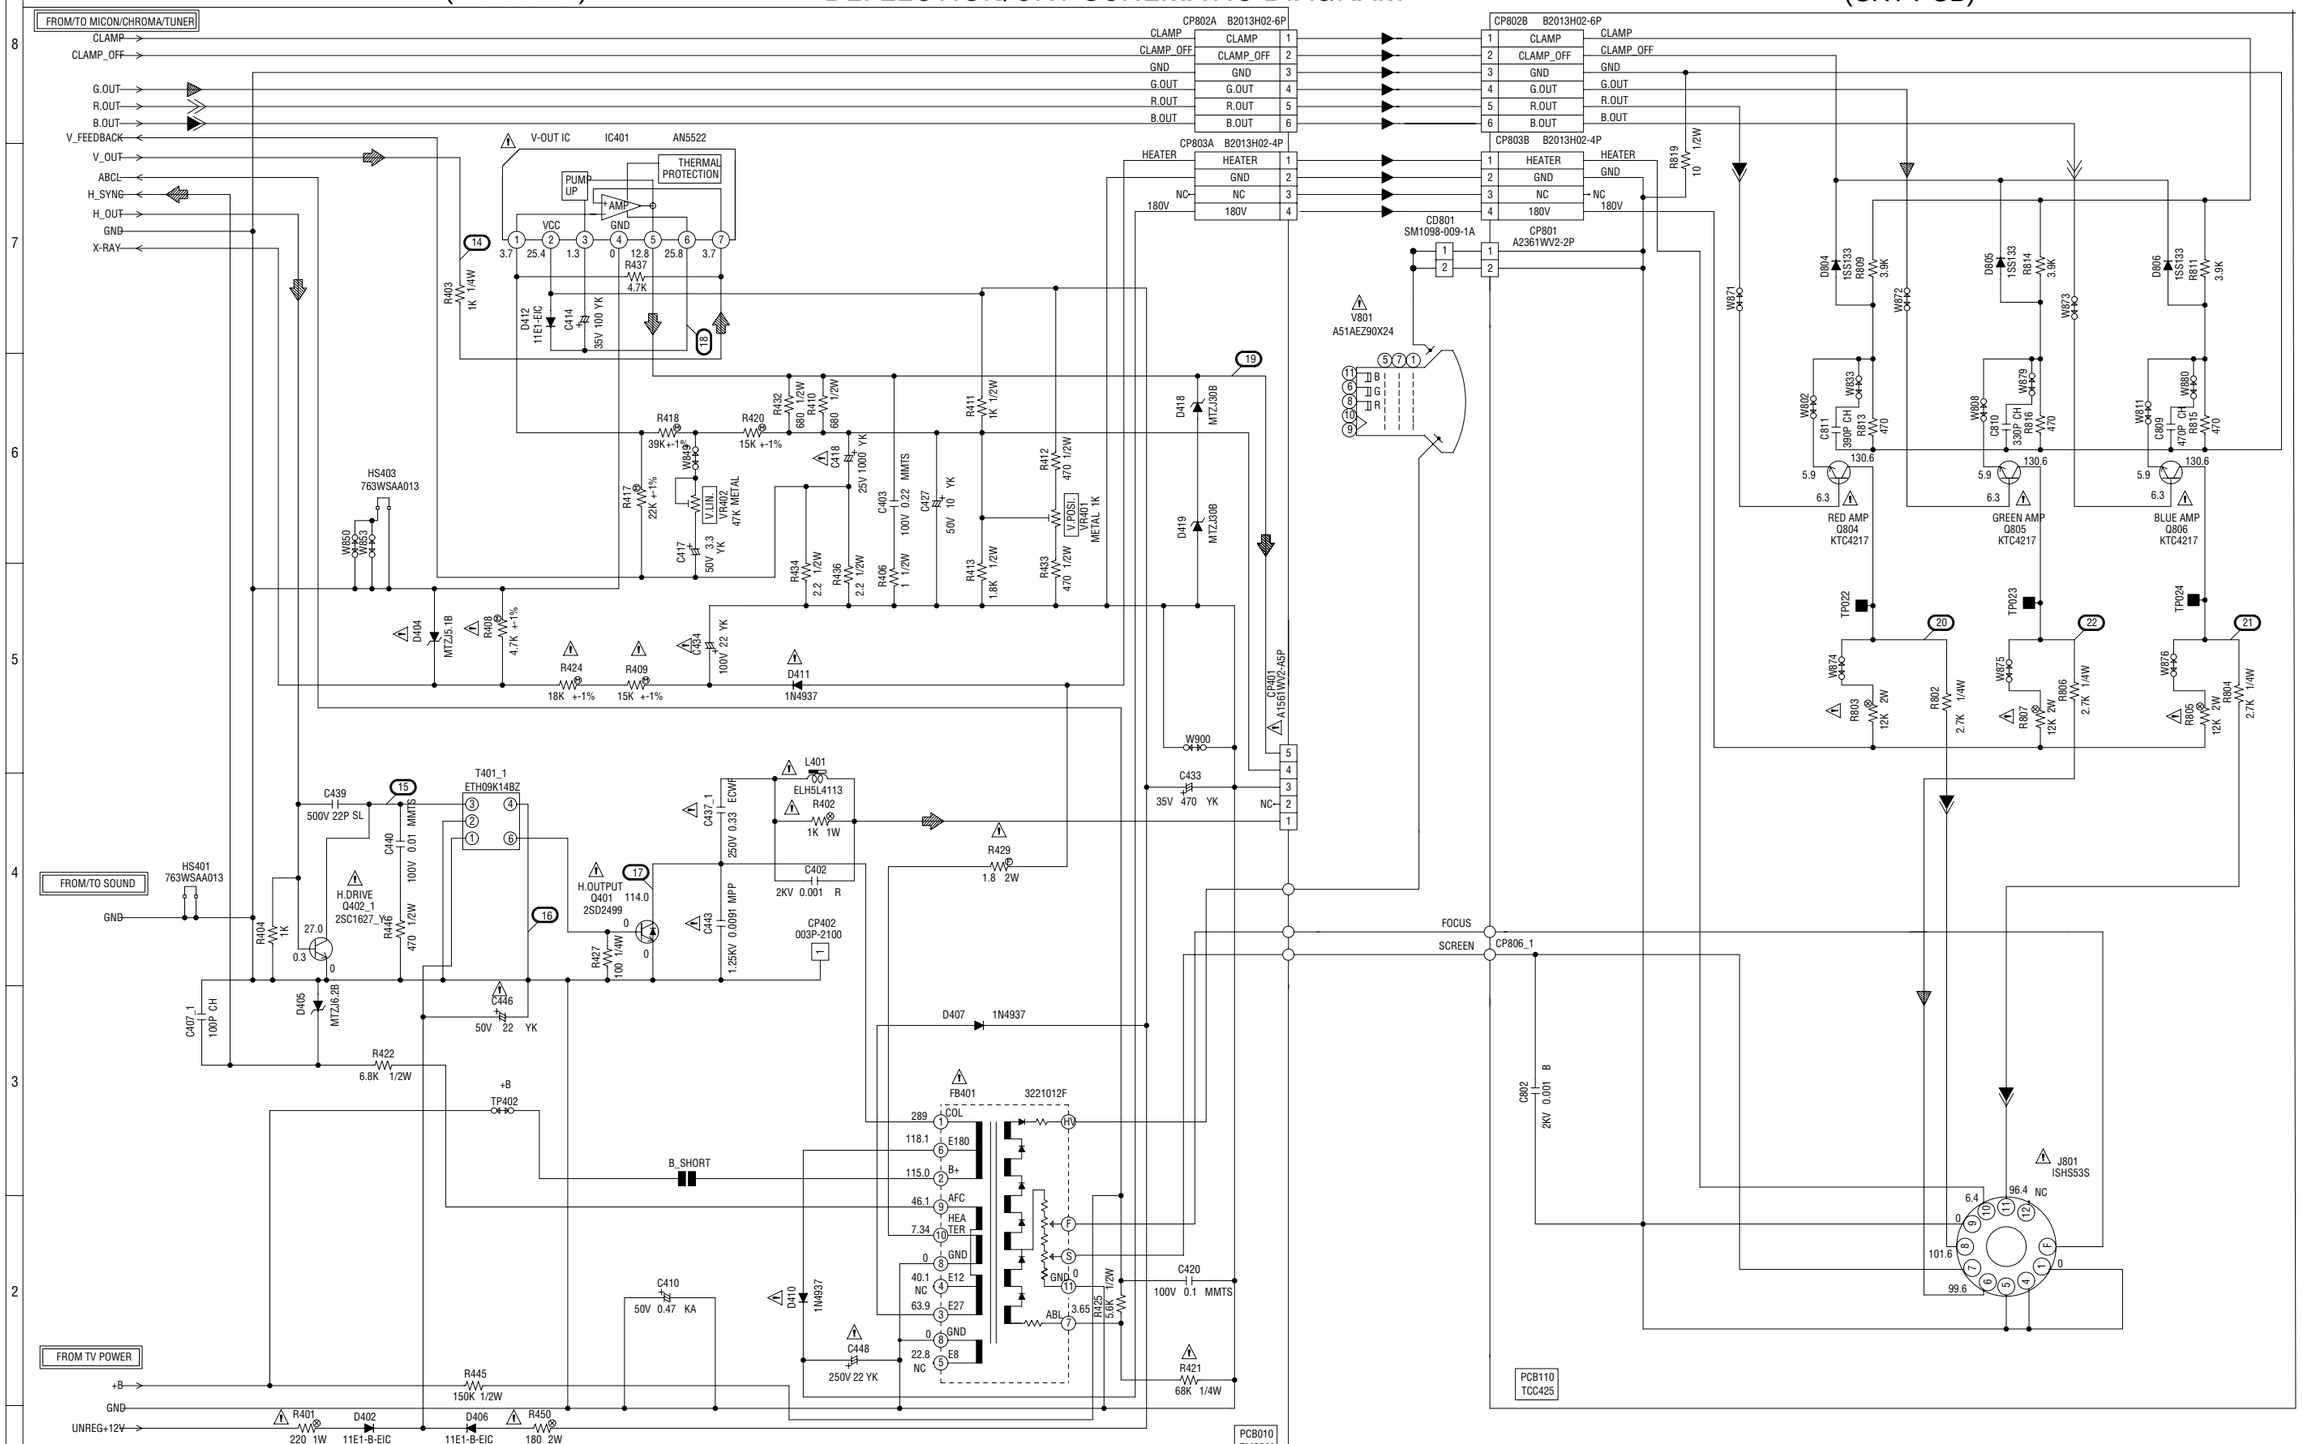

NOTE:THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

NOTE:THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE。

NOTE: THE RESISTOR MARKED F IS FUSE RESISTOR. THE ALUMI ELECTROLYTIC CAPACITOR MARKED NP IS NON POLAR ONE.

ATTENTION:LES PIECES REPAREES PAR UN ⚠ ETANT DANGEREUSES AN POINT DE VUE SECURITE N'UTILISER QUE CELLS DECRITES DANS LA NOMENCLATURE DES PIECES。

CAUTION:SINCE THESE PARTS MARKED BY ⚠ ARE CRITICAL FOR SAFETY,USE ONES DESCRIBED IN PARTS LIST ONLY 。

◀ R.SIGNAL
◀ G.SIGNAL
≪ B.SIGNAL
⇚ DEFLECTION SIGNAL

TV POWER SCHEMATIC DIAGRAM
(MAIN PCB)

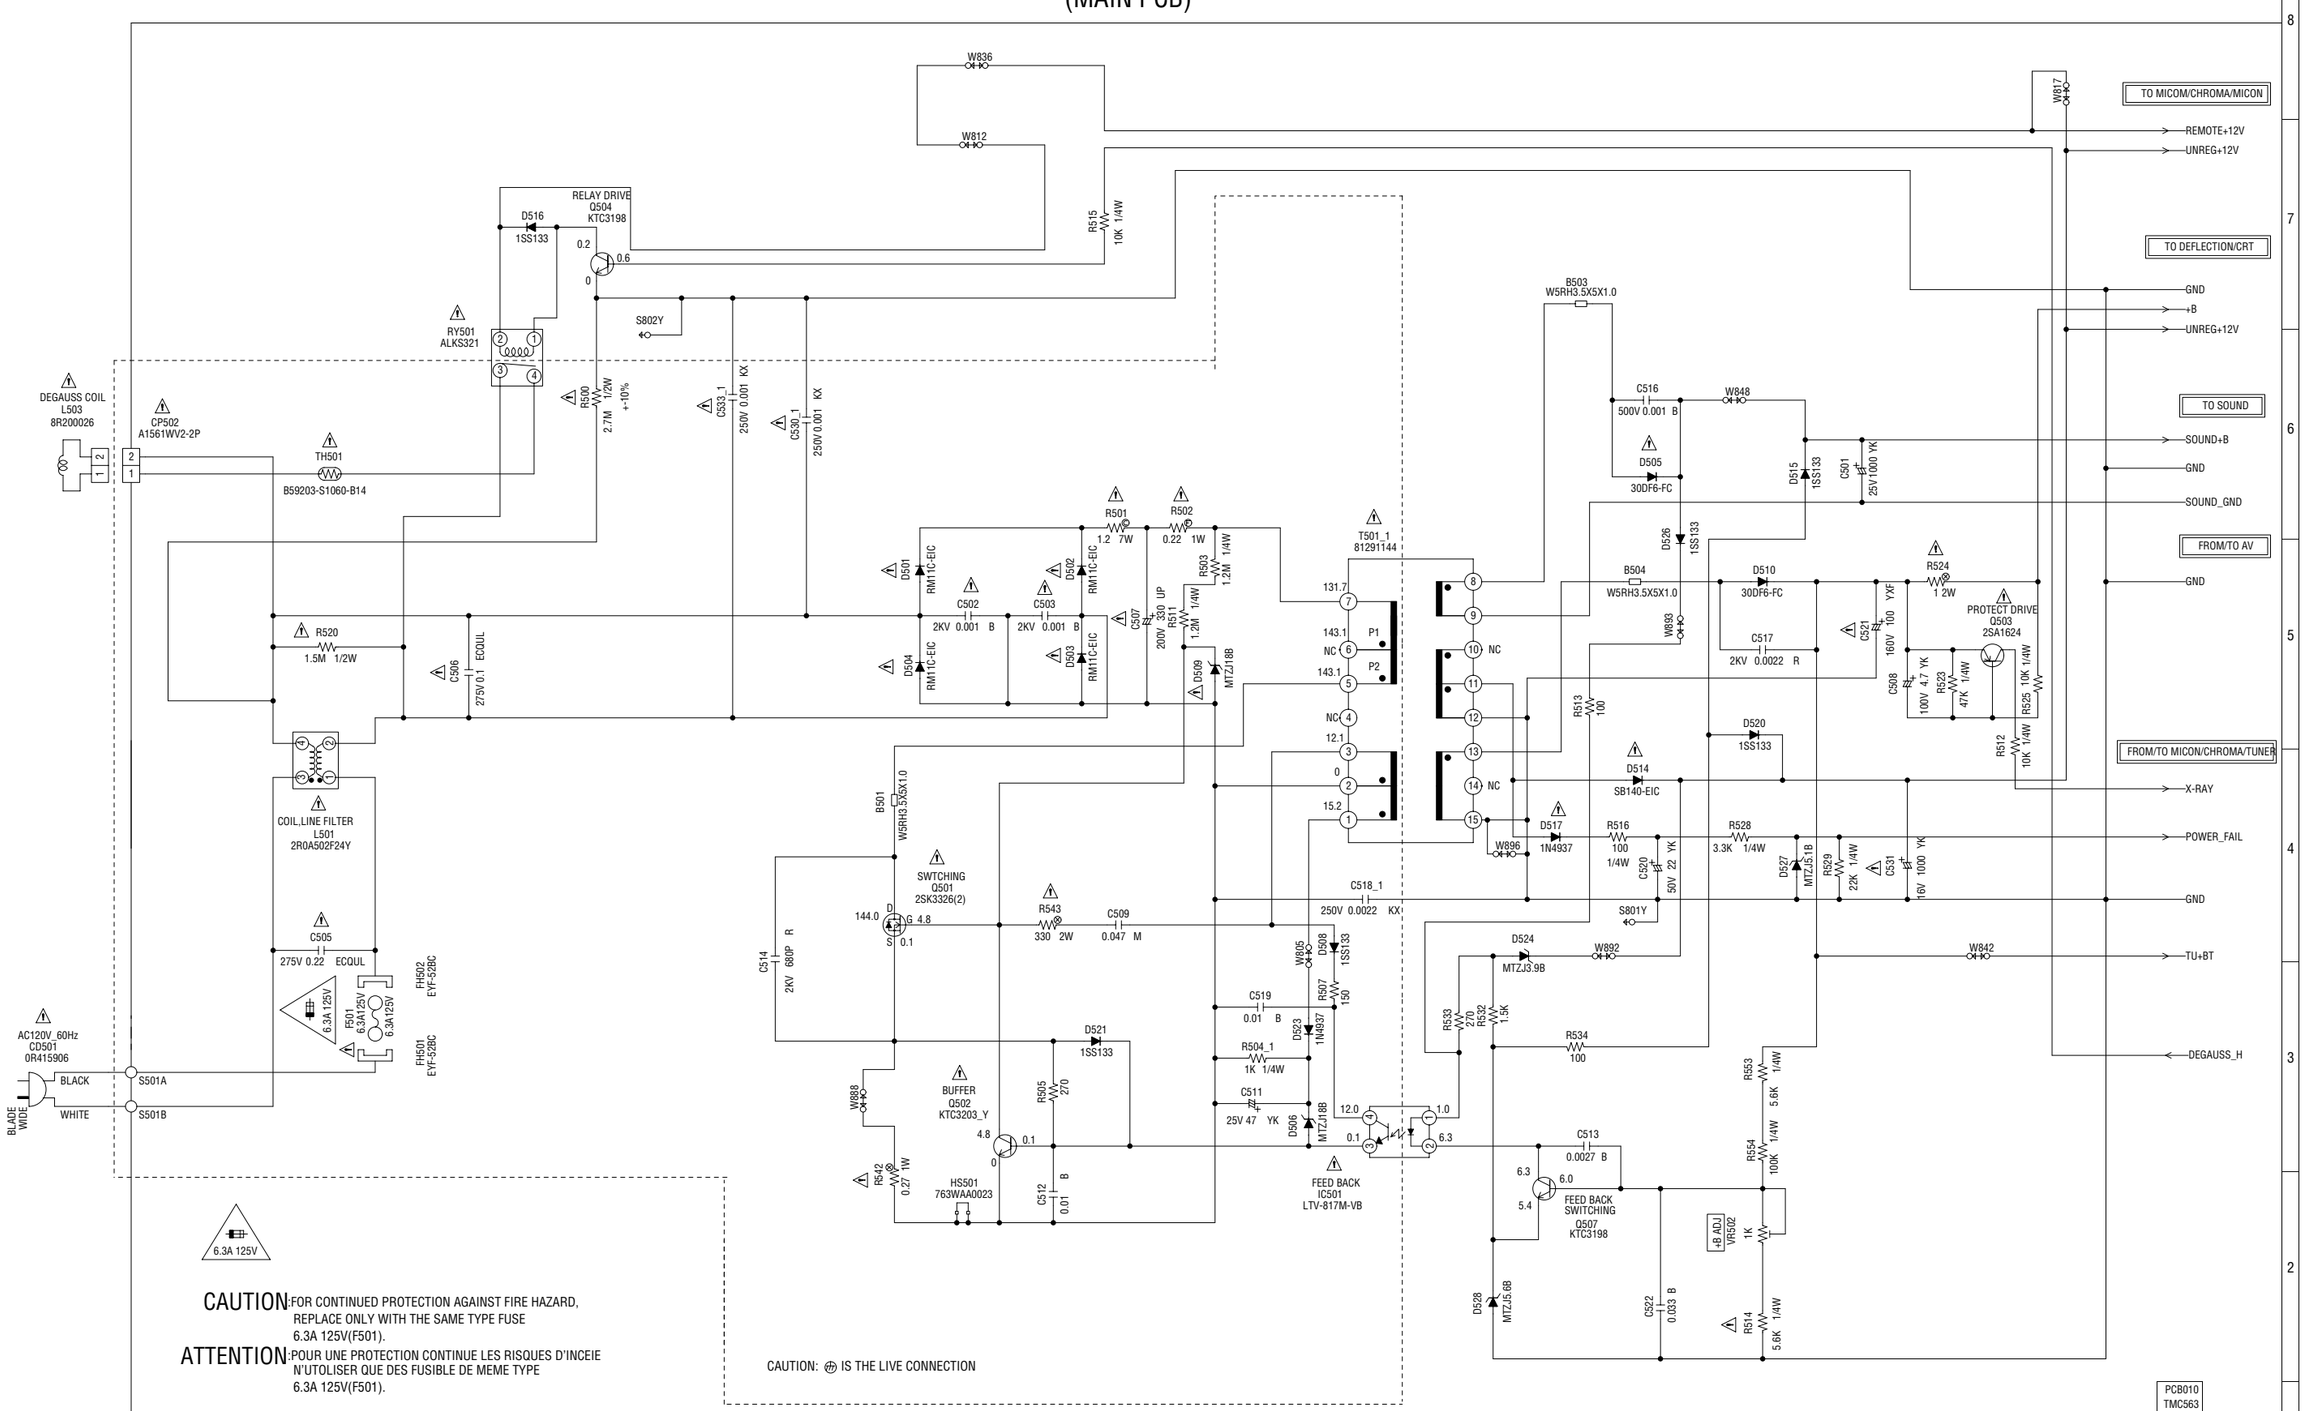

CAUTION: FOR CONTINUED PROTECTION AGAINST FIRE HAZARD, REPLACE ONLY WITH THE SAME TYPE FUSE 6.3A 125V(F501).

ATTENTION: POUR UNE PROTECTION CONTINUE LES RISQUES D'INCEIE N'UTOLISER QUE DES FUSIBLE DE MEME TYPE 6.3A 125V(F501).

CAUTION: ⏚ IS THE LIVE CONNECTION

NOTE: THE RESISTOR MARKED F IS FUSE RESISTOR. THE ALUMI ELECTROLYTIC CAPACITOR MARKED NP IS NON POLAR ONE.

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE 。

ATTENTION: LES PIECES REPAREES PAR UN ⚠ ETANT DANGEREUSES AN POINT DE VUE SECURITE N'UTILISER QUE CELLS DECRITES DANS LA NOMENCLATURE DES PIECES。

CAUTION: SINCE THESE PARTS MARKED BY ⚠ ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED IN PARTS LIST ONLY 。

SOUND SCHEMATIC DIAGRAM
(MAIN PCB)

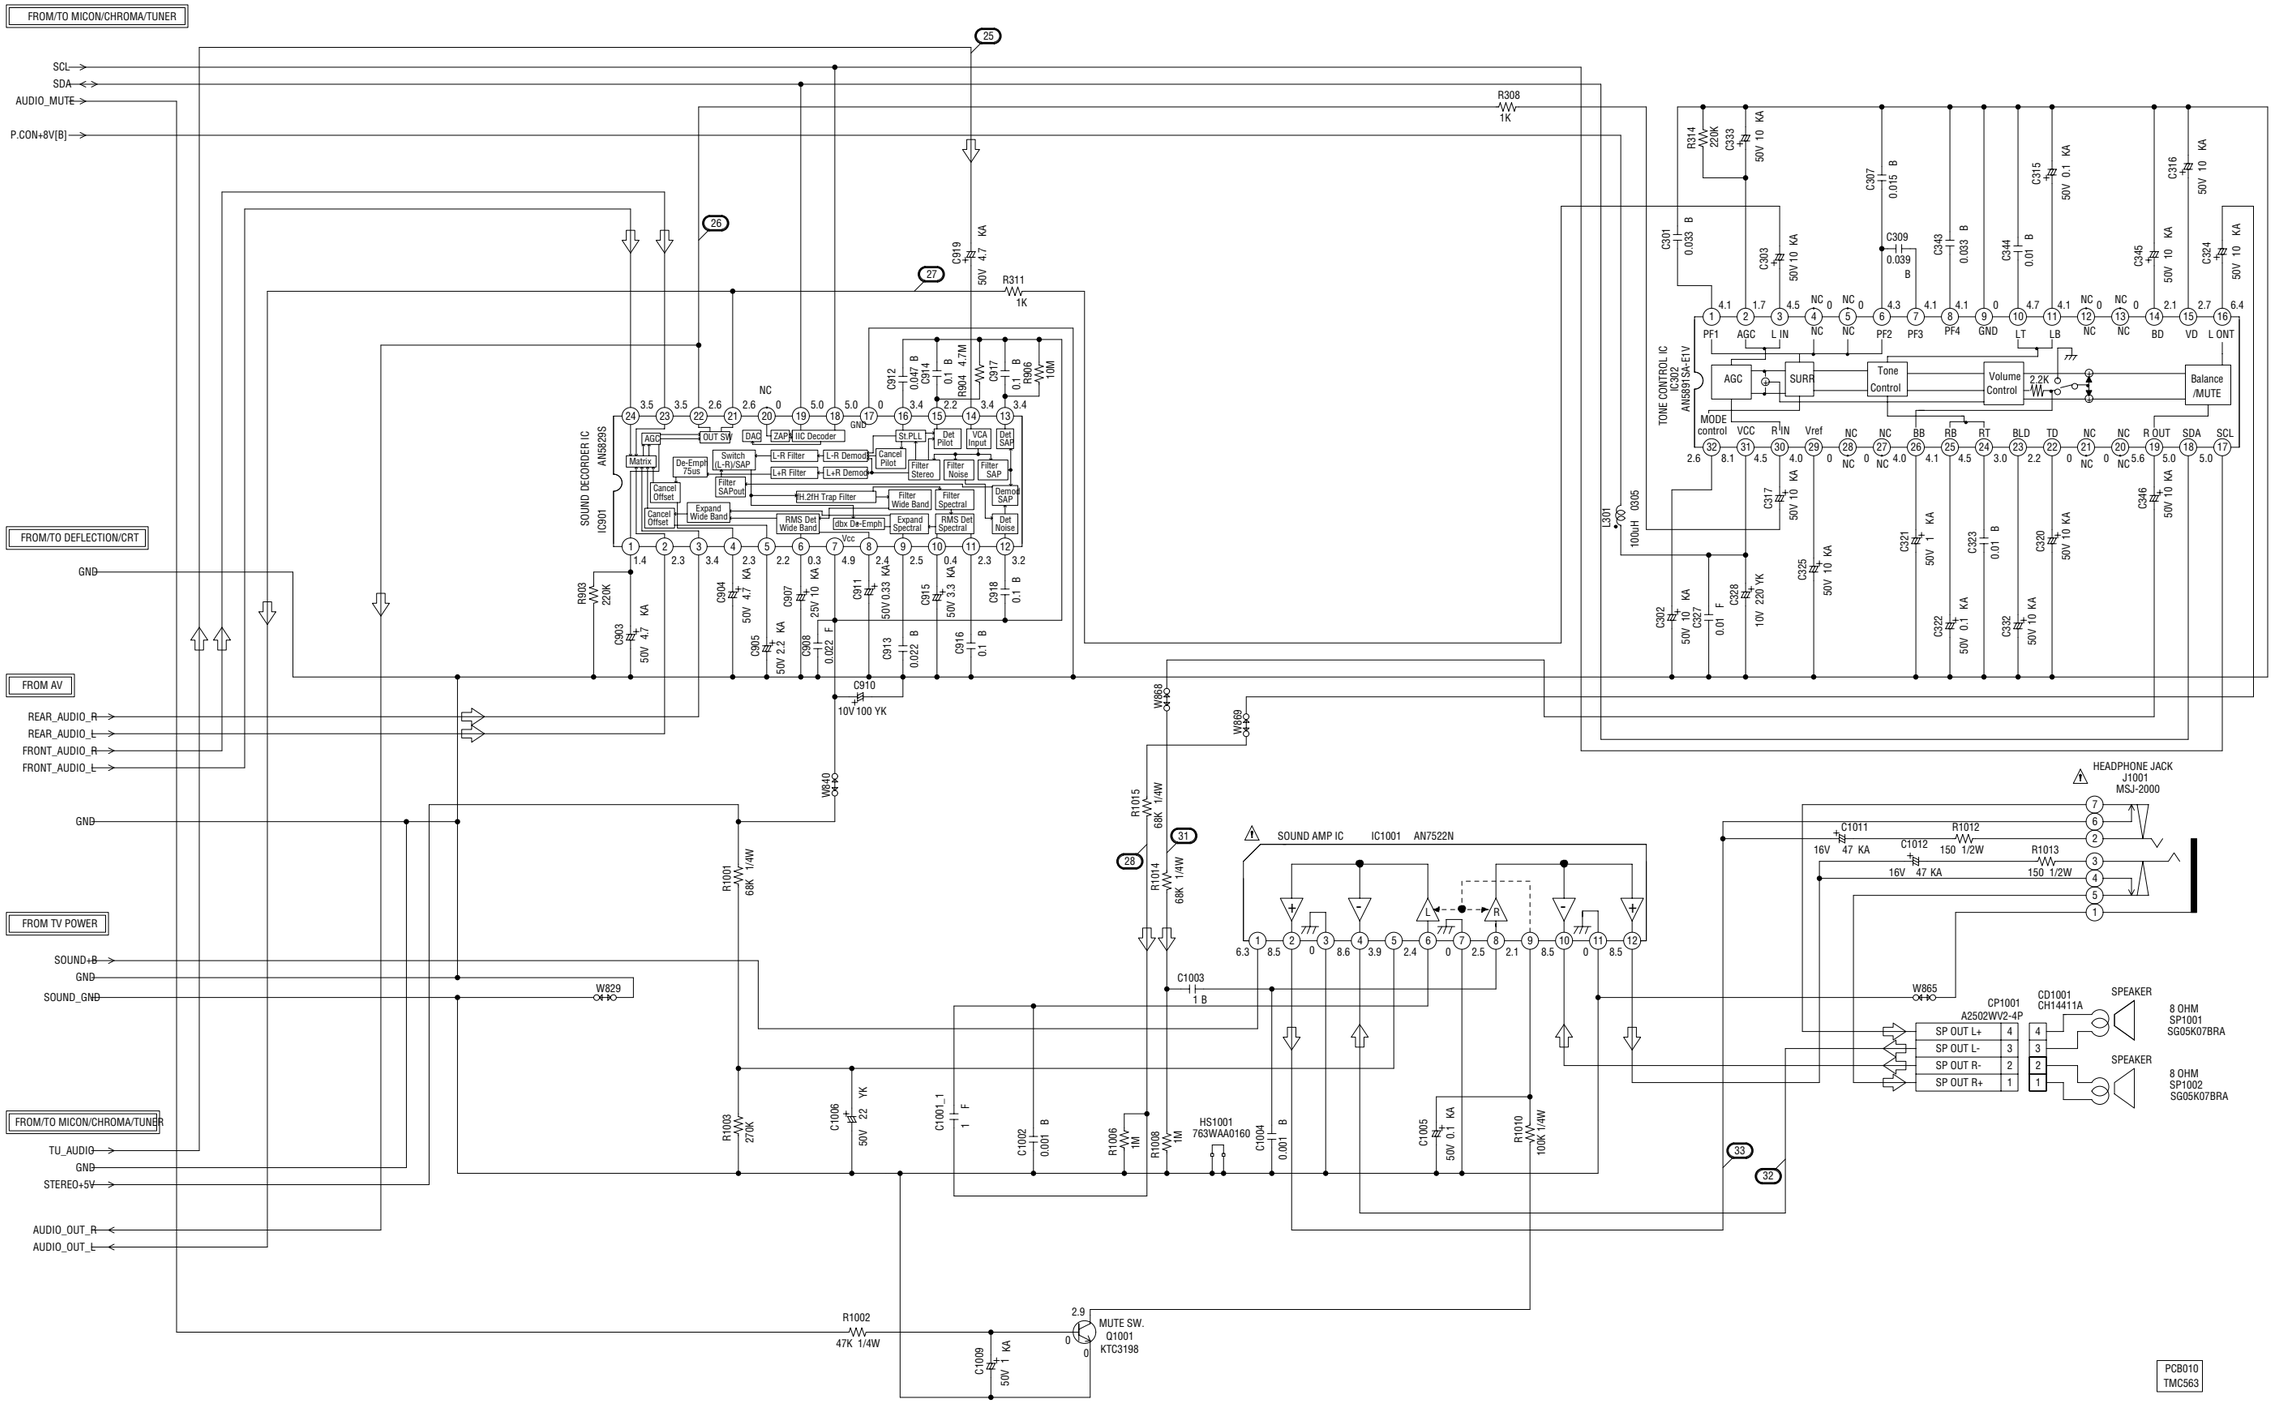

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE。

NOTE: THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

CAUTION: SINCE THESE PARTS MARKED BY ⚠ ARE CRITICAL FOR SAFETY, USE ONES DESCRIBED IN PARTS LIST ONLY 。

ATTENTION: LES PIECES REPAREES PAR UN ⚠ ETANT DANGEREUSES AN POINT DE VUE SECURITE N'UTILISER QUE CELLS DECRITES DANS LA NOMENCLATURE DES PIECES。

⇦ AUDIO SIGNAL

COMB/FILTER SCHEMATIC DIAGRAM
(MAIN PCB)

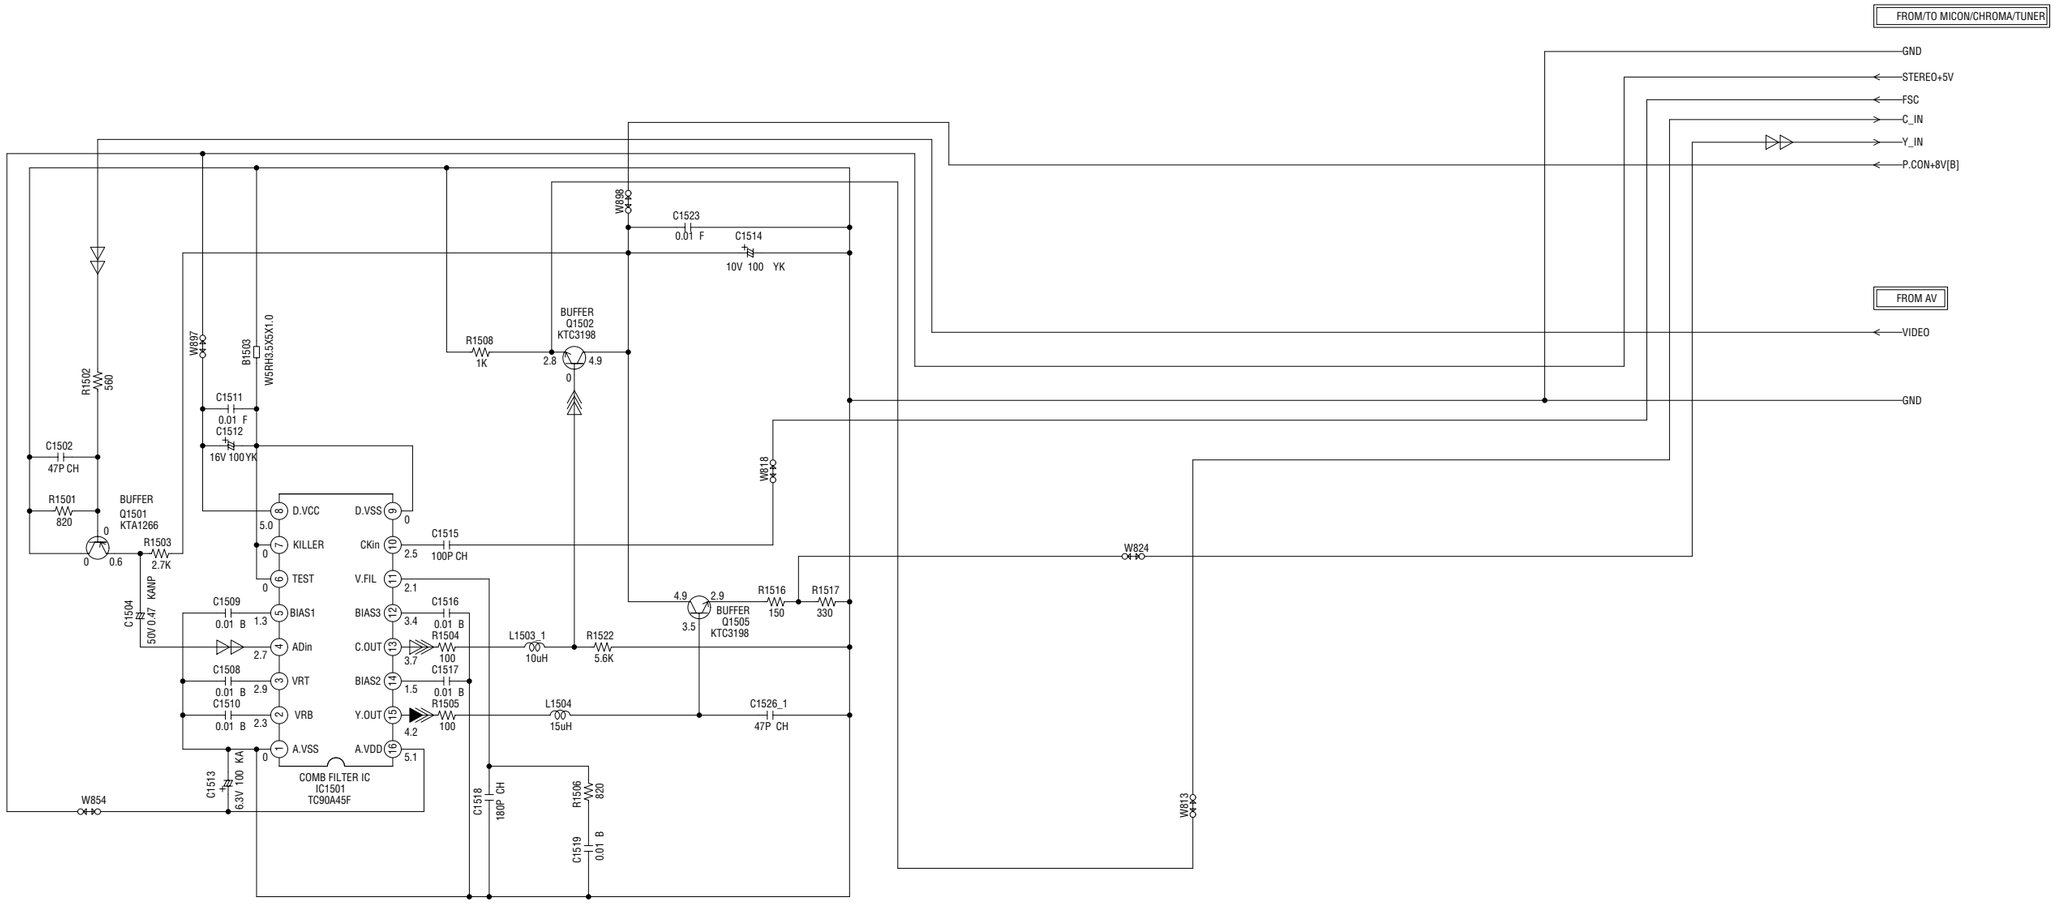

NOTE:THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE。

◁◁ TUNER VIDEO SIGNAL
◀◀ LUMINANCE SIGNAL
◁◁ COLOR SIGNAL

AV SCHEMATIC DIAGRAM

(MAIN PCB)

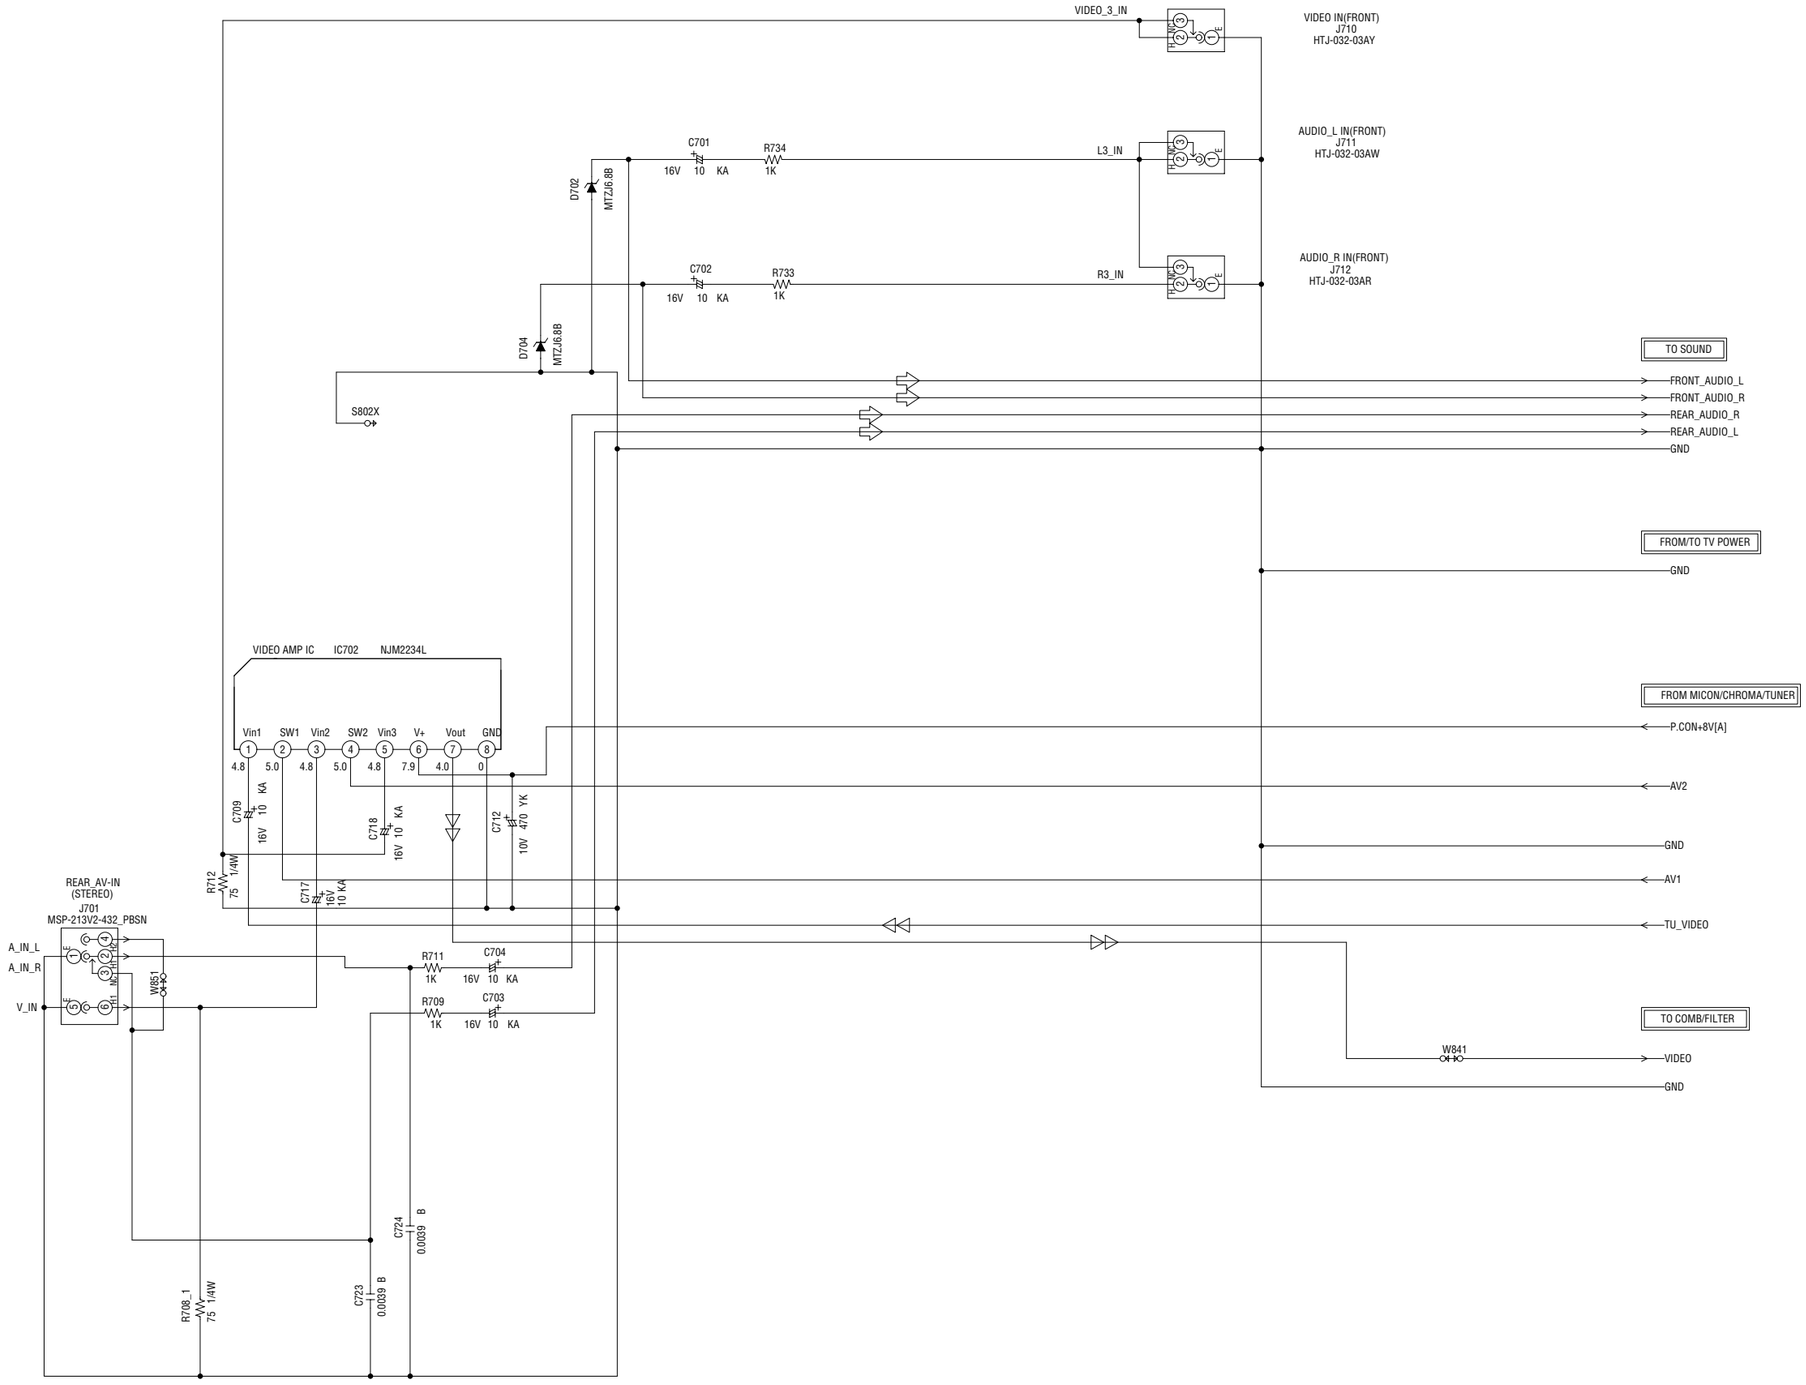

NOTE:THE DC VOLTAGE AT EACH PART WAS MEASURED WITH THE DIGITAL TESTER WHEN THE COLOR BROADCAST WAS RECEIVED IN GOOD CONDITION AND PICTURE IS NORMAL.

NOTE: THIS SCHEMATIC DIAGRAM IS THE LATEST AT THE TIME OF PRINTING AND SUBJECT TO CHANGE WITHOUT NOTICE。

⇦ AUDIO SIGNAL

⇦⇦ TUNER VIDEO SIGNAL

WAVEFORMS

MICON/CHROMA/TUNER

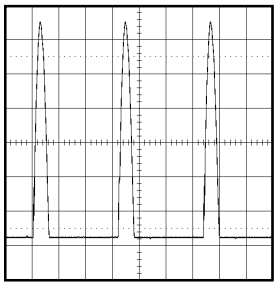

② 20V 20µs/div

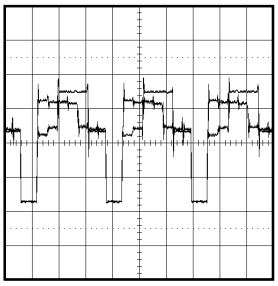

⑦ 1V 20µs/div

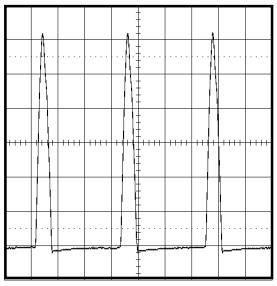

⑰ 200V 20µs/div

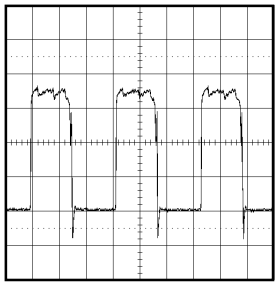

③ 200mV 20µs/div

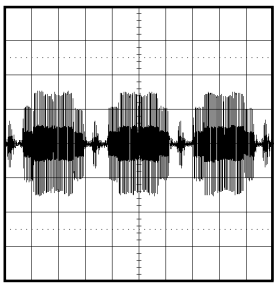

⑧ 200mV 20µs/div

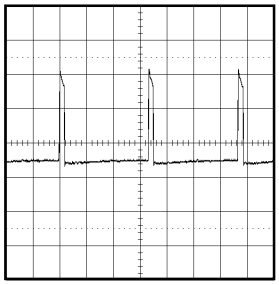

⑱ 10V 5ms/div

DEFLECTION/CRT

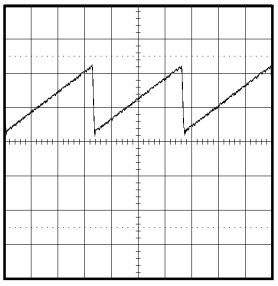

④ 0.5V 5ms/div

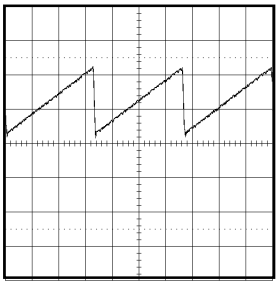

⑭ 0.5V 5ms/div

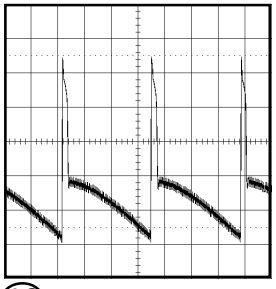

⑲ 10V 5ms/div

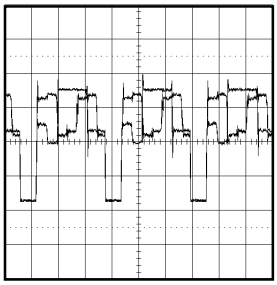

⑤ 1V 20µs/div

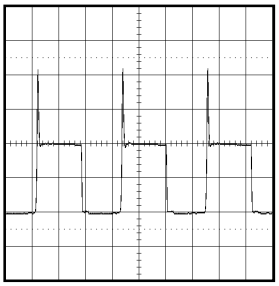

⑮ 20V 20µs/div

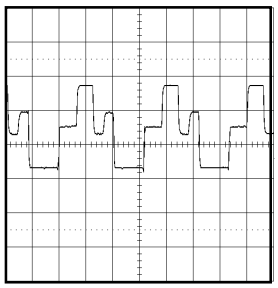

⑳ 50V 20µs/div

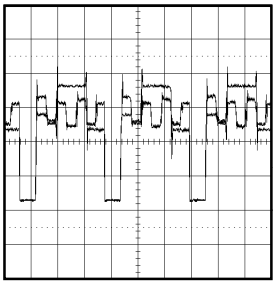

⑥ 1V 20µs/div

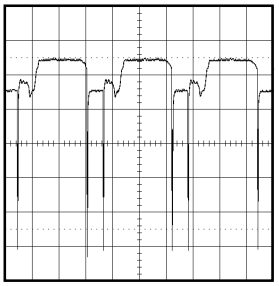

⑯ 2V 20µs/div

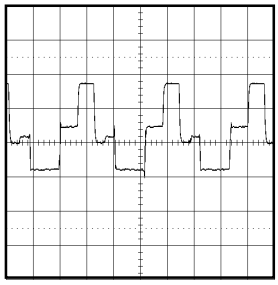

㉑ 50V 20µs/div

NOTE: The following waveforms were measured at the point of the corresponding balloon number in the schematic diagram.

WAVEFORMS

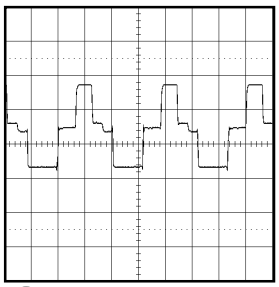

(22) 50V 20µs/div

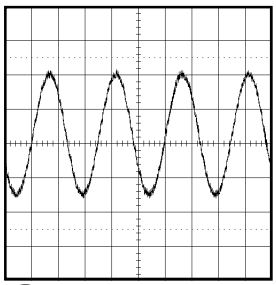

(31) 200mV 1ms/div

SOUND

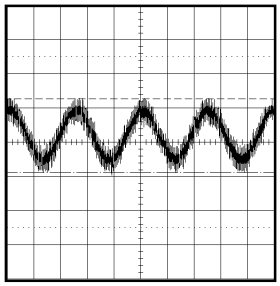

(25) 0.5V 1ms/div

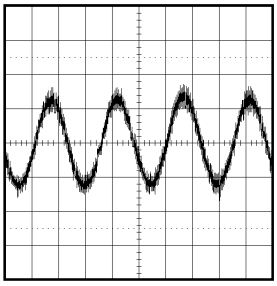

(32) 0.5V 1ms/div

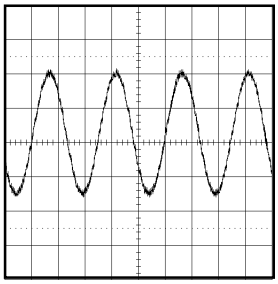

(26) 200mV 1ms/div

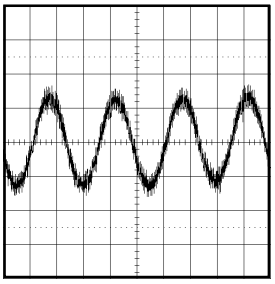

(33) 0.5V 1ms/div

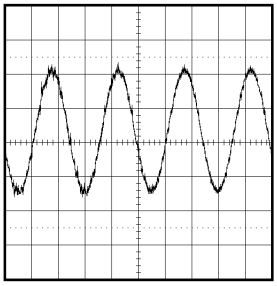

(27) 200mV 1ms/div

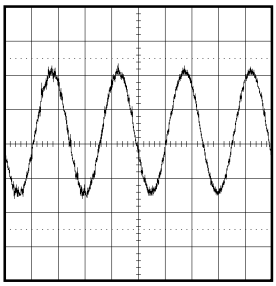

(28) 200mV 1ms/div

NOTE: The following waveforms were measured at the point of the corresponding balloon number in the schematic diagram.

MECHANICAL EXPLODED VIEW

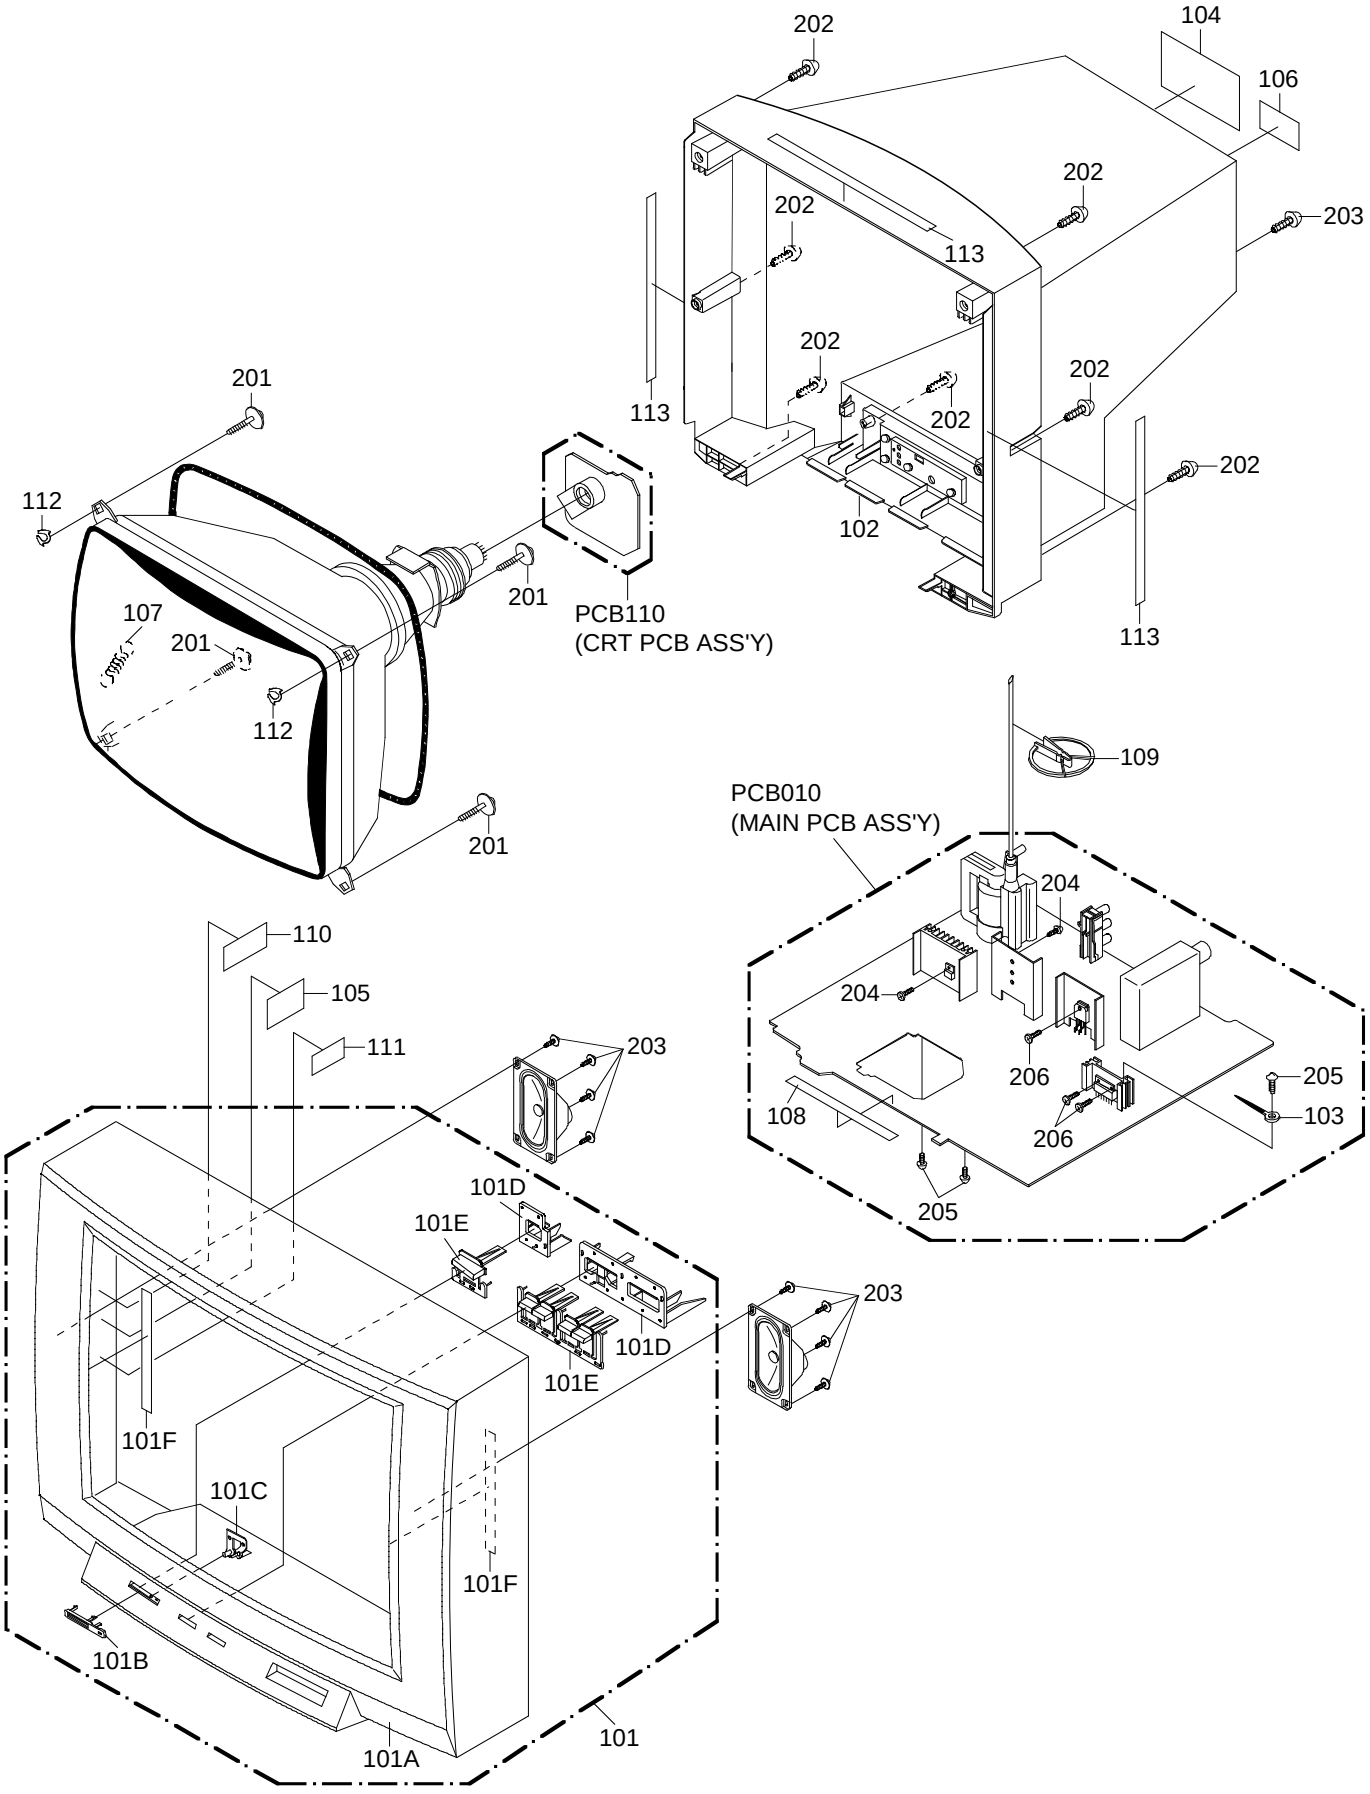

MECHANICAL REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.	Description	
101	AE000659	A3M901H720	CABINET,FRONT ASSY	
101A	AD301454	701WPJB692	CABINET,FRONT	
101B	AD301455	711WPA0170	PLATE,FRONT	
101C	AD301456	713WPA0204	GUIDE,REMOCON	
101D	AD301457	735WPA0652	BUTTON,BASE	
101E	AD301458	735WPBA419	BUTTON,FRAME	
101F	AE000003	800WQ00045	FELT SHEET	
102	AE000660	A3M901H740	CABINET,BACK ASSY	
103	BZ710039	8995034000	CORD CLIP UL CO.	
104	AD302305	722549A165	SHEET,RATING	
105	AD300132	7230006818	SHEET,CAUTION	
106	AD302152	726000A040	SHEET,CRT NO.	
107	BZ710258	741WUA0001	SPRING,EARTH	
108	AE000661	800WQ0A029	FELT SHEET	
109	BZ710260	899HV3T000	HOLDER,ANODE WIRE	
110	AE000007	7220001107	SHEET,HWC	
111	AE000006	7220001119	SHEET,CSA WARNING	
112	AD300135	769WSA0011	WASHER CRT T=0.5	
113	AD301894	800WQ0A020	FELT SHEET	
201	BZ710275	8121J50B54	SCREW,TAP TITE(P) GW20	5x28
202	BZ710035	8117540A64	SCREW,TAPPING(B0) TRUSS	4x16
203	BZ710031	8110630A04	SCREW,TAP TITE(P) BRAZIER	3x10
204	BZ710239	8109I30A04	SCREW,TAP TITE(B) WH7	3x10
205	BZ710019	8109630802	SCREW,TAP TITE(B) BRAZIER	3x8
206	BZ710018	8107630804	SCREW,TAP TITE(S) BRAZIER	3x8
---	AE000662	723000C254	SHEET,BAR CODE	
---	AE000010	791WHA0085	LAMIFILM,BAG	
---	AD301461	792WHA0360	PACKAGE,TOP	
---	AD301462	792WHA0361	PACKAGE,BOTTOM	
---	AD302307	793WCDB638	GIFT BOX	
---	AE000663	795WCAA139	PAD	635x550
---	AD302308	A3M901A975	INSTRUCTION BOOK KIT	
---	AD300022	J3I70417	REGISTRATION CARD	
---	AD300023	J3I70436	ESP CARD	
---	AD302309	J3M90101A	INSTRUCTION BOOK	
---	AE000060	JB5UD300	POLYBAG,INSTRUCTION(RED CAUTION)	

ELECTRICAL REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.		Description	
			RESISTORS		
⚠R401	AD300783	R3X181221J	R,METAL OXIDE	220 OHM 1W	
⚠R402	AE000676	R3K181102J	R,METAL	1K OHM 1W	
⚠R408	AD301014	R4X5T6472F	R,METAL	4.7K OHM 1/6W	
⚠R409	AD300037	R4X5T6153F	R,METAL	15K OHM 1/6W	
⚠R424	BZ210105	R4X5T6183F	R,METAL	18K OHM 1/6W	
R425	AE000675	R00202562J	RC	5.6K OHM 1/2W	
⚠R429	BZ210046	R6558A1R8J	R,FUSE	1.8 OHM 2W	
⚠R450	BZ210246	R3X18A181J	R,METAL OXIDE	180 OHM 2W	
⚠R500	BZ210080	R0G3K2275K	RC	2.7M OHM 1/2W	
⚠R501	AD300720	R5X2AE1R2J	R,CEMENT	1.2 OHM 7W	
⚠R502	BZ210190	R63581R22J	R,FUSE	0.22 OHM 1W	
⚠R514	BZ210166	R002T4562J	RC	5.6K OHM 1/4W	
⚠R520	BZ210206	R002T2155J	RC	1.5M OHM 1/2W	
⚠R524	BZ210083	R3X28A010J	R,METAL OXIDE	1 OHM 2W	
⚠R542	AD301143	R3X181R27J	R,METAL OXIDE	0.27 OHM 1W	
⚠R543	AD301016	R3X28A331J	R,METAL OXIDE	330 OHM 2W	
R629	AD301433	R3X18A120J	R,METAL OXIDE	12 OHM 2W	
⚠R803	BZ210050	R3X18A123J	R,METAL OXIDE	12K OHM 2W	
⚠R805	BZ210050	R3X18A123J	R,METAL OXIDE	12K OHM 2W	
⚠R807	BZ210050	R3X18A123J	R,METAL OXIDE	12K OHM 2W	
			CAPACITORS		
C402	BZ110202	C0PLRR713K	CC	0.001 UF 2KV R	
⚠C414	AD301434	E02LU4101M	CE	100 UF 35V	
C418	BZ110053	E02LF3102M	CE	1000 UF 25V	
⚠C433	BZ110149	E02LT4471M	CE	470 UF 35V	
⚠C434	BZ110195	E02LU8220M	CE	22 UF 100V	
⚠C437	BZ110026	P411F3334J	CMPP	0.33 UF 250V ECWF	
⚠C443	AD302292	P4N8FJ912H	CMPP	0.0091UF 1.25KV	
⚠C448	BZ110204	E0ELFD220M	CE	22 UF 250V	
⚠C501	BZ110053	E02LF3102M	CE	1000 UF 25V	
C502	AD300078	C0JBB0713K	CC	0.001 UF 2KV B	
C503	AD300078	C0JBB0713K	CC	0.001 UF 2KV B	
⚠C505	BZ110025	P2122B224M	CMP	0.22 UF 275V ECQUL	
⚠C506	BZ110035	P2122B104M	CMP	0.1 UF 275V ECQUL	
⚠C507	AD301635	E51CGC331M	CE	330 UF 200V	
C514	AD301320	C0PLRR7U2K	CC	680 PF 2KV R	
C517	BZ110201	C0PLRR7H3K	CC	0.0022 UF 2KV R	
⚠C518	AD301108	CD39E0MH3M	CC	0.0022UF 250V	
⚠C521	AD300060	E62NFB101M	CE	100 UF 160V	
⚠C530	AD301026	CD39E0M13M	CC	0.001 UF 250V	
⚠C531	AD300925	E02LT2102M	CE	1000 UF 16V	
⚠C533	AD301026	CD39E0M13M	CC	0.001 UF 250V	
C630	AE000674	E02L01471M	CE	470 UF 10V	or
	BZ110099	E02LT1471M	CE	470 UF 10V	
C632	AE000674	E02L01471M	CE	470 UF 10V	or
	BZ110099	E02LT1471M	CE	470 UF 10V	
C709	BZ110249	E52H02100M	CE	10 UF 16V	or
	BZ110096	E50HU2100M	CE	10 UF 16V	
C802	AD300078	C0JBB0713K	CC	0.001 UF 2KV B	
			DIODES		
D001	BZ410037	D97U03301B	DIODE,ZENER	MTZJ33B T-77	
D106	BZ410054	0021721150	LED	SLR-342VCT32	
D402	BZ410123	D2W0011E10	DIODE,SILICON	11E1-B-EIC	
⚠D404	BZ410020	D97U05R11B	DIODE,ZENER	MTZJ5.1B T-77	
⚠D405	BZ410066	D97U06R21B	DIODE,ZENER	MTZJ6.2B T-77	
D406	BZ410123	D2W0011E10	DIODE,SILICON	11E1-B-EIC	
⚠D407	AD300731	D2WXN49370	DIODE,SILICON	1N4937	
⚠D410	AD300731	D2WXN49370	DIODE,SILICON	1N4937	
⚠D411	AD300731	D2WXN49370	DIODE,SILICON	1N4937	
D412	BZ410043	D2WT011E10	DIODE,SILICON	11E1-EIC	
D418	BZ410019	D97U03001B	DIODE,ZENER	MTZJ30B T-77	
D419	BZ410019	D97U03001B	DIODE,ZENER	MTZJ30B T-77	
⚠D501	BZ410062	D2WTRM11C0	DIODE,SILICON	RM11C-EIC	
⚠D502	BZ410062	D2WTRM11C0	DIODE,SILICON	RM11C-EIC	
⚠D503	BZ410062	D2WTRM11C0	DIODE,SILICON	RM11C-EIC	
⚠D504	BZ410062	D2WTRM11C0	DIODE,SILICON	RM11C-EIC	
D505	AD300076	D28F30DF60	DIODE,RECTIFIER	30DF6-FC	
D506	AD300671	D97U01801B	DIODE,ZENER	MTZJ18B T-77	
D508	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77	
⚠D509	AD300671	D97U01801B	DIODE,ZENER	MTZJ18B T-77	
⚠D510	AD300076	D28F30DF60	DIODE,RECTIFIER	30DF6-FC	

ELECTRICAL REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.		Description
			DIODES	
⚠D514	BZ410077	D2WXSB1400	DIODE,SCHOTTKY	SB140-EIC
D515	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D516	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D517	AD300731	D2WXN49370	DIODE SILICON	1N4937
D520	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D521	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D523	AD300731	D2WXN49370	DIODE,SILICON	1N4937
D524	BZ410064	D97U03R91B	DIODE,ZENER	MTZJ3.9B T-77
D526	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D527	BZ410020	D97U05R11B	DIODE,ZENER	MTZJ5.1B T-77
D528	BZ410021	D97U05R61B	DIODE,ZENER	MTZJ5.6B T-77
D603	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D604	BZ410058	D97U08R21B	DIODE,ZENER	MTZJ8.2B T-77
D606	BZ410043	D2WT011E10	DIODE,SILICON	11E1-EIC
D702	BZ410022	D97U06R81B	DIODE,ZENER	MTZJ6.8B T-77
D704	BZ410022	D97U06R81B	DIODE,ZENER	MTZJ6.8B T-77
D804	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D805	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
D806	BZ410006	D1VT001330	DIODE,SILICON	1SS133T-77
			ICS	
IC101	AD302159	I56F07091A	IC	OEC7091A
IC199	AE000671	A3M901A015	IC	S-24C04BDP-LA
IC302	AD301983	I01FF58910	IC	AN5891SA-E1V
⚠IC401	BZ611053	I01TD55220	IC	AN5522
⚠IC501	BZ410088	0002E00610	PHOTO COUPLER	LTV-817M-VB
IC702	AD301442	I0QS02234L	IC	NJM2234L
IC901	AD300059	I01FF58290	IC	AN5829S
⚠IC1001	AD302184	I0FSP7522N	IC	AN7522N
IC1501	AD300609	I05FE90A45	IC	TC90A45F
			TRANSISTORS	
Q105	BZ510086	TPATB03003	COMPOUND TRANSISTOR	KRA102MAT
⚠Q401	BZ510028	TDUF024990	TRANSISTOR,SILICON	2SD2499
⚠Q402	BZ510089	TC5T01627Y	TRANSISTOR,SILICON	2SC1627_Y(TPE2)
Q501	BZ510098	T220033260	FET	2SK3326(2)
Q502	BZ510070	TCAT032034	TRANSISTOR,SILICON	KTC3203_Y-AT
⚠Q503	BZ510004	TA3T016240	TRANSISTOR,SILICON	2SA1624-AA
Q504	BZ510069	TCATC31980	TRANSISTOR,SILICON	KTC3198-AT(Y,GR)
Q507	BZ510069	TCATC31980	TRANSISTOR,SILICON	KTC3198-AT(Y,GR)
Q601	BZ510070	TCAT032034	TRANSISTOR,SILICON	KTC3203_Y-AT
Q602	BZ510070	TCAT032034	TRANSISTOR,SILICON	KTC3203_Y-AT
Q603	BZ510070	TCAT032034	TRANSISTOR,SILICON	KTC3203_Y-AT
Q606	BZ510070	TCAT032034	TRANSISTOR,SILICON	KTC3203_Y-AT
Q607	BZ510069	TCATC31980	TRANSISTOR,SILICON	KTC3198-AT(Y,GR)
Q608	BZ510070	TCAT032034	TRANSISTOR,SILICON	KTC3203_Y-AT
Q609	BZ510069	TCATC31980	TRANSISTOR,SILICON	KTC3198-AT(Y,GR)
Q610	BZ510070	TCAT032034	TRANSISTOR,SILICON	KTC3203_Y-AT
⚠Q804	BZ510091	TCA0042170	TRANSISTOR,SILICON	KTC4217(O,Y)
⚠Q805	BZ510091	TCA0042170	TRANSISTOR,SILICON	KTC4217(O,Y)
⚠Q806	BZ510091	TCA0042170	TRANSISTOR,SILICON	KTC4217(O,Y)
Q1001	BZ510069	TCATC31980	TRANSISTOR,SILICON	KTC3198-AT(Y,GR)
Q1501	BZ510073	TAATA12660	TRANSISTOR,SILICON	KTA1266-AT(Y,GR)
Q1502	BZ510069	TCATC31980	TRANSISTOR,SILICON	KTC3198-AT(Y,GR)
Q1505	BZ510069	TCATC31980	TRANSISTOR,SILICON	KTC3198-AT(Y,GR)
			COILS &TRANSFORMERS	
L301	BZ310041	02167F101J	COIL	100 UH
L401	BZ310063	022100027A	COIL,LINEARITY	ELH5L4113
⚠L501	AD301444	029T000100	COIL,LINE FILTER	2R0A502F24Y
⚠L503	BZ310033	028R200026	COIL,DEGAUSS	8R200026
L1503	AD302294	0216A6100J	COIL	10 UH
L1504	AD302295	0216A6150J	COIL	15 UH
T401	BZ310157	045009003J	TRANS,HORIZONTAL DRIVE	ETH09K14BZ
⚠T501	AD302296	0481291144	TRANSFORMER,SWITCHING	81291144
			JACKS	
J701	AD301038	060J431019	RCA JACK	MSP-213V2-432 PBSN
J710	AD300110	060G401047	RCA JACK	HTJ-032-03AY
J711	AD300111	060G401046	RCA JACK	HTJ-032-03AW
J712	AD300112	060G401039	RCA JACK	HTJ-032-03AR
⚠J801	AD301356	066F130020	SOCKET,CATHODE RAY,TUBE	ISHS53S
J1001	BZ614361	060J131015	HEADPHONE JACK	MSJ-2000
			SWITCHES	
SW101	BZ612010	0504101T34	SWITCH,TACT	EVQ21505R

ELECTRICAL REPLACEMENT PARTS LIST

Location No.	TSB P/N	Reference No.		Description
			SWITCHES	
SW102	BZ612010	0504101T34	SWITCH,TACT	EVQ21505R
SW103	BZ612010	0504101T34	SWITCH,TACT	EVQ21505R
SW104	BZ612010	0504101T34	SWITCH,TACT	EVQ21505R
SW105	BZ612010	0504101T34	SWITCH,TACT	EVQ21505R
			VARIABLE RESISTORS	
VR401	BZ210238	V1K6313BTE	VOLUME,SEMI FIXED	NVG6TLTAB102
VR402	BZ210237	V1K63Q4BTE	VOLUME,SEMI FIXED	NVG6TLTAB473
VR502	BZ210108	V116313BTC	VOLUME,SEMI FIXED	EVNCYAA03B13
			P.C.BOARD ASSEMBLIES	
PCB010	AE000672	A3M901H010	PCB ASS'Y (FOR UAS)	TMC563A
PCB010	AE000678	A3M902A010	PCB ASS'Y (FOR CANADA)	TMC563A
PCB110	AE000673	A3M901H110	PCB ASS'Y (FOR UAS)	TCC425A
PCB110	AE000679	A3M902A110	PCB ASS'Y (FOR CANADA)	TCC425A
			MISCELLANEOUS	
B501	BZ310200	024H003553	CORE,BEADS	W5RH3.5X5X1.0
B503	BZ310121	024HT03553	CORE,BEADS	W5RH3.5X5X1.0
B504	BZ310121	024HT03553	CORE,BEADS	W5RH3.5X5X1.0
B1503	BZ310121	024HT03553	CORE,BEADS	W5RH3.5X5X1.0
BT001	AE000012	1412004008	BATTERY,MANGAN	R03(AB)E_2P_G
BT002	AE000012	1412004008	BATTERY,MANGAN	R03(AB)E_2P_G
⚠CD501	BZ614407	120R415906	CORD,AC BUSH	0R415906
CD801	BZ614175	06CU82039A	CORD,CONNECTOR	SM1098-009-1A
CD802	AE000677	WDL6046038	FLAT CABLE	AWM2468 AWG26 6C BLACK 460MM
CD803	AD301450	WBL6032038	FLAT CABLE	AWM2468 AWG26 4C BLACK 320MM
⚠CP401	BZ614303	069S450089	CONNECTOR PCB SIDE	A1561WV2-A5P
CP402	BZ614444	069D01001A	CONNECTOR PCB SIDE	003P-2100
⚠CP502	AD300687	069S420110	CONNECTOR PCB SIDE	A1561WV2-2P
CP601	BZ614102	0694270139	CONNECTOR PCB SIDE	173979-7
CP801	BZ614269	069S320010	CONNECTOR PCB SIDE	A2361WV2-2P
CD1001	AD301449	06CH14411A	CORD,CONNECTOR	CH14411A
CP1001	AD301045	069S140419	CONNECTOR PCB SIDE	A2502WV2-4P
CP802A	BZ614333	067U006049	WIRE HOLDER	B2013H02-6P
CP802B	BZ614333	067U006049	WIRE HOLDER	B2013H02-6P
CP803A	BZ614334	067U004029	WIRE HOLDER	B2013H02-4P
CP803B	BZ614334	067U004029	WIRE HOLDER	B2013H02-4P
EL001	BZ614043	124116281A	EYE LET	XRY16X28BD
EL002	BZ614044	124120301A	EYE LET	XRY20X30BD
⚠F501	AD301046	081PC6R305	FUSE	51MS063L
⚠FB401	AD302299	043221012F	TRANSFORMER,FLYBACK	FQI-21B002
FH501	BZ614005	06710T0006	HOLDER,FUSE	EYF-52BC
FH502	BZ614005	06710T0006	HOLDER,FUSE	EYF-52BC
OS101	AD301048	0773071001	REMOTE RECEIVER	RPM7138-H5
⚠RY501	AD300114	0560V20115	RELAY	ALKS321
⚠SP1001	AD301050	070C457003	SPEAKER	SG05K07BRA
⚠SP1002	AD301050	070C457003	SPEAKER	SG05K07BRA
⚠TH501	AD302000	D8EE0B1400	DEGAUSS ELEMENT	B59203-S1060-B14
TM101	AD301451	076N0EH030	TRANSMITTER	RC-EH030
⚠TU001	AD302169	0163100002	RF UNIT	ENG36A01G
⚠V801	AD302300	098Q210449	CRT W/DY	A51AEZ90X24
X601	AD302003	100CT3R505	CRYSTAL	HC-49/C

RESISTOR

RC..... CARBON RESISTOR

CAPACITORS

CC..... CERAMIC CAPACITOR
CE..... ALUMI ELECTROLYTIC CAPACITOR
CP..... POLYESTER CAPACITOR
CPP..... POLYPROPYLENE CAPACITOR
CPL..... PLASTIC CAPACITOR
CMP..... METAL POLYESTER CAPACITOR
CMPL..... METAL PLASTIC CAPACITOR
CMPP..... METAL POLYPROPYLENE CAPACITOR

TOSHIBA CORPORATION
1-1, SHIBAURA 1-CHOME, MINATO-KU, TOKYO 105-8001, JAPAN